


DISASSEMBLY

Remove the reflector bolts and reflector from the fork leg.

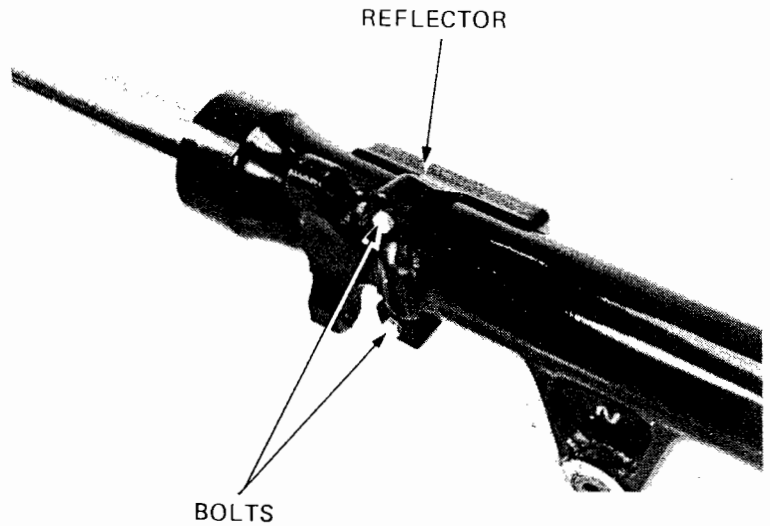

Depress the air valve and release front fork air pressure.


CAUTION

- *If air pressure is not released before disassembling, the fork cap may become a projectile.*
- *The cap is also under spring pressure. Use care when removing and wear eye and face protection.*

Hold the fork tube in a vise with soft jaws or a shop towel and remove the fork tube cap.

CAUTION

Do not damage the sliding surface.

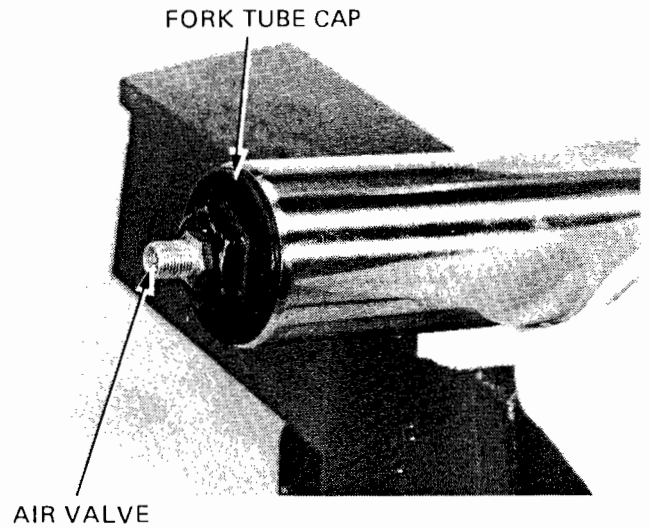

Remove the spacer, washer and fork spring.

Pour the fork fluid out.

Pour the remaining fork fluid out by pumping the fork tube several times.

