



Pull the fork tube out until resistance from the slider bushing is felt. Then move it in and out, tapping the bushing lightly until the fork tube separates from the slider. The slider bushing will be forced out by the fork tube bushing.

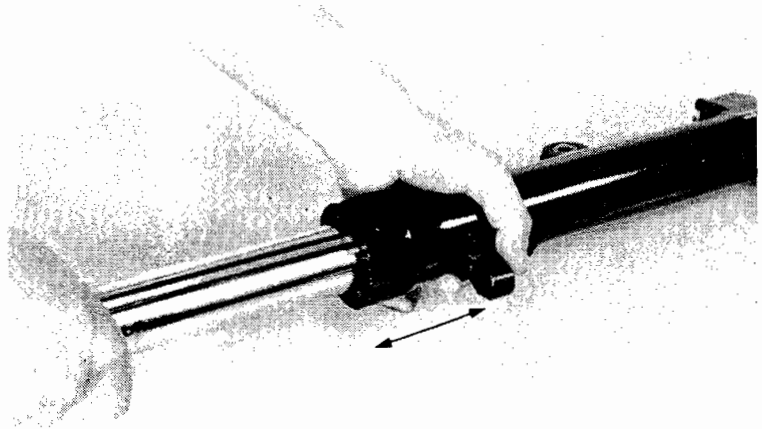

On the left fork, remove the spring seat, spring and oil lock valve from inside the slider. Remove the oil lock piece from inside the slider.

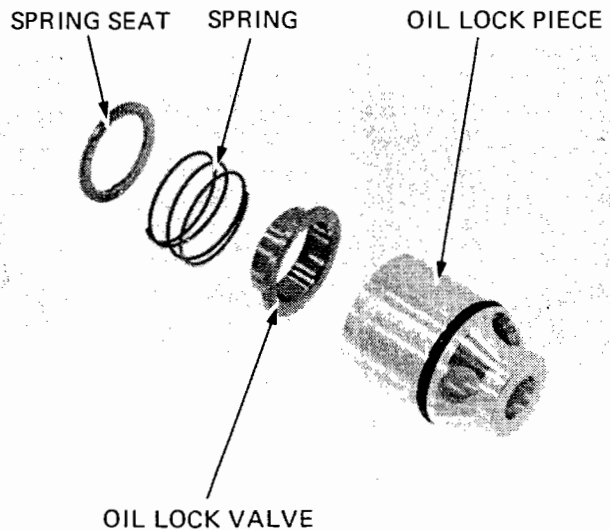

Remove the oil seal, back-up ring and slider bushing from the fork tube.

NOTE

Do not remove the fork tube bushing unless it is necessary to replace it with a new one. See inspection on Page 14-22.

