





FRONT WHEEL/SUSPENSION

Visually inspect the slider and fork tube bushings. Replace the bushings if there is excessive scoring or scratching, or if the teflon is worn so that the copper surface appears on more than 3/4 of the entire surface.

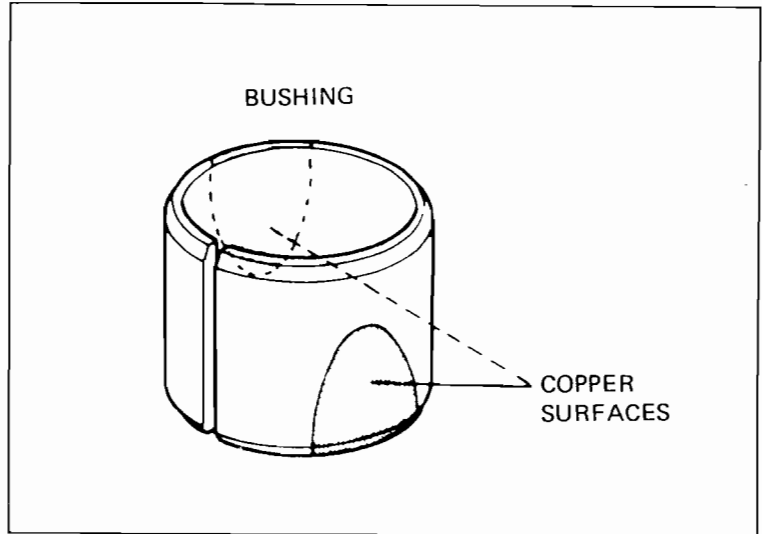

ANTI-DIVE CASE

Remove the four socket bolts and remove the antidive case.

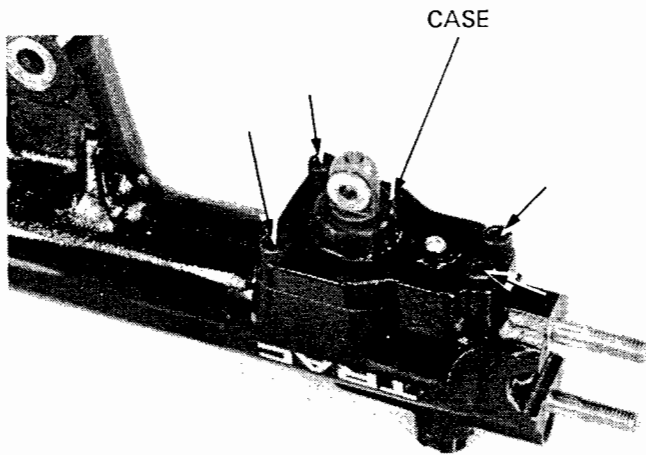

Remove the piston and spring.

Remove the boot, pivot bolt collar and rubber bushing.

