




Check the spring and piston for wear or damage.



Remove the screw attaching the anti-dive adjuster knob, knob and orifice.

Remove the check ball screw, spring and ball.

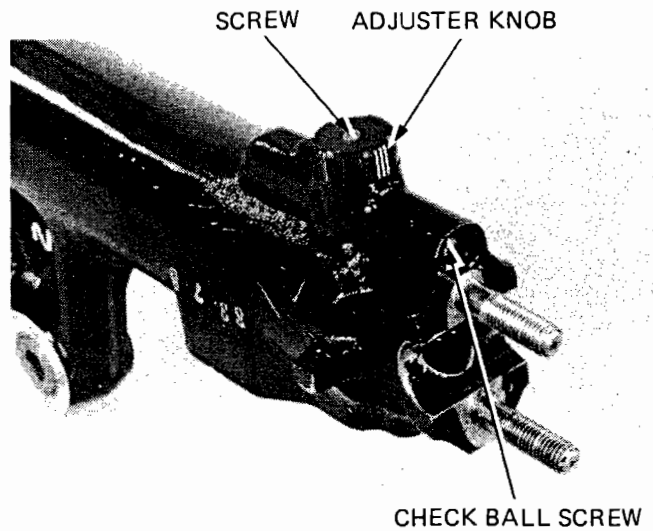

Check the orifice for clogging, scoring, excessive wear or damage.

