




STEERING STEM


REMOVAL

Remove the following components:

- headlight case (Page 21-2).
- instruments (Page 21-3).
- handlebars (Page 14-3).
- front wheel (Page 14-9).
- brake caliper assemblies (Page 16-10) and brackets (Page 16-13).
- instrument bracket.
- ignition switch (Page 21-5).
- horn.

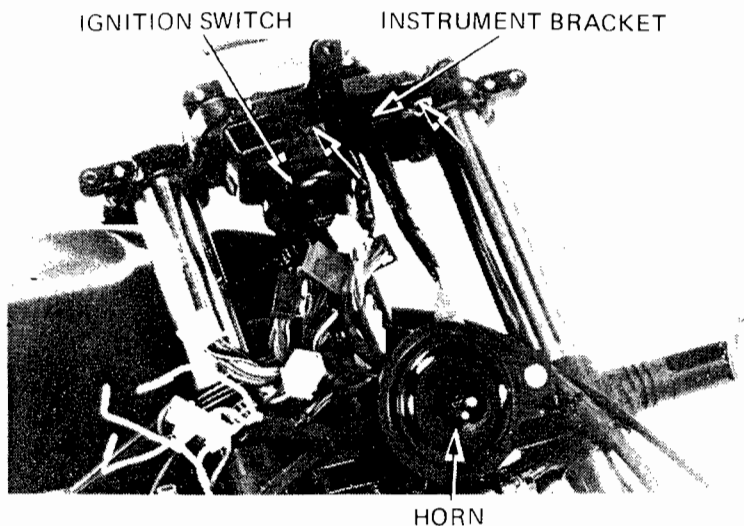

- brake three way joint.

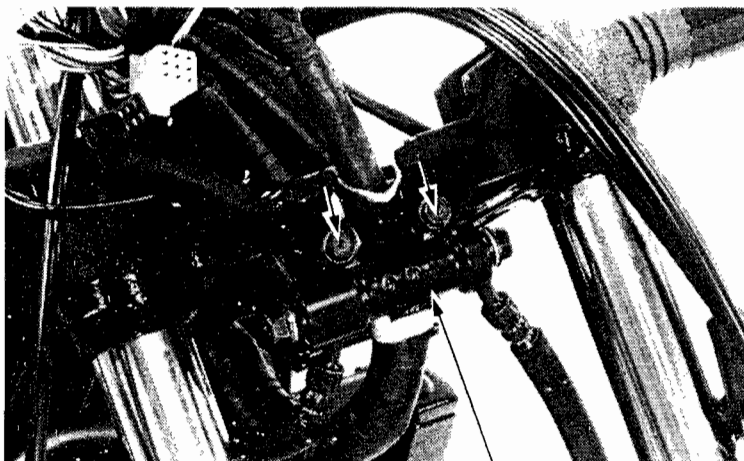

- steering stem nut.
- fork top bridge.
- front forks (Page 14-17).

EXTENSION BAR 07716-0020500 or COMMERCIALLY AVAILABLE in U.S.A.

