


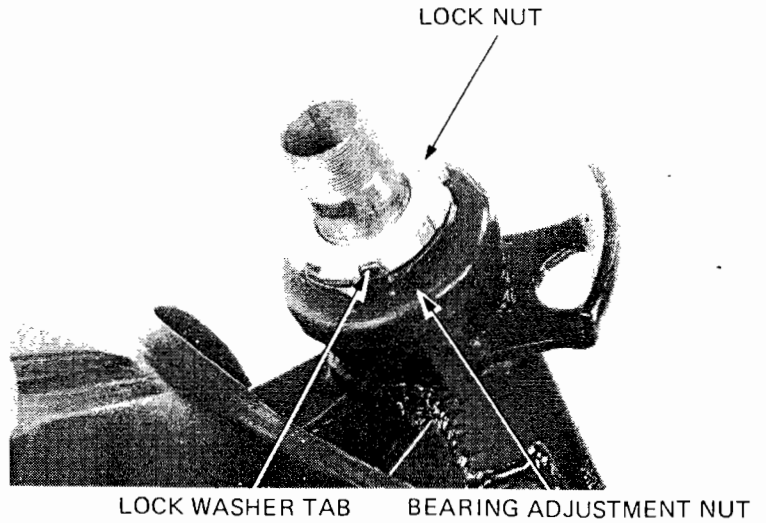


Bend down the lock washer tab and remove the lock nut and lock washer.
Remove the bearing adjustment nut with the steering stem socket (07916-3710100).



Remove the dust seal, bearing inner race and upper bearing.

Remove the steering stem, grease retainer and lower bearing.

Check the bearings, outer and inner races for wear or damage and replace if necessary.

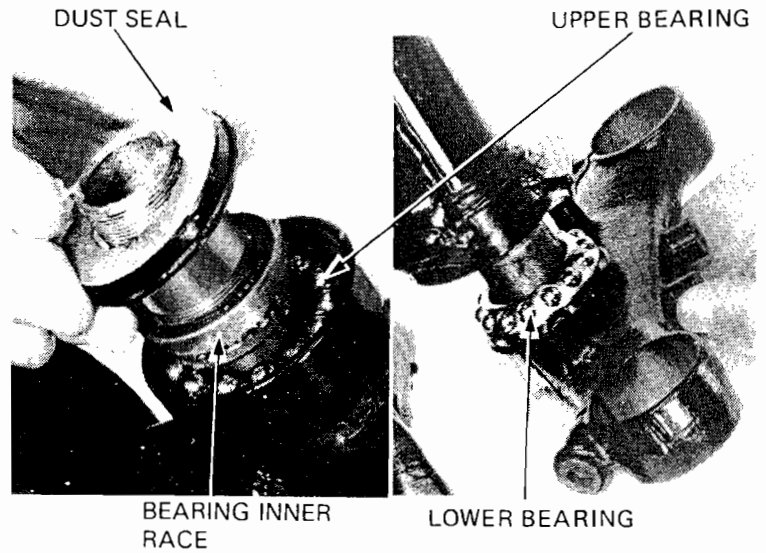

BEARING REPLACEMENT


NOTE

Always replace the bearing, inner and outer races as a set.

Remove the upper and lower bearing inner races.

NOTE

Use side "A" of the race remover attachment 07953-MJ1000A.

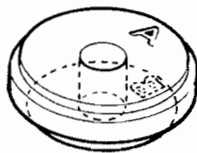

RACE REMOVER ATTACHMENT
07953-MJ1000A (U.S.A. only)

DRIVER
07949-3710001 OR
07949-3710000

