




Install new upper and lower bearing outer races into the head pipe.

ATTACHMENT, 52 x 55 mm
07746-0010400


ATTACHMENT, 42 x 47 mm
07746-0010300

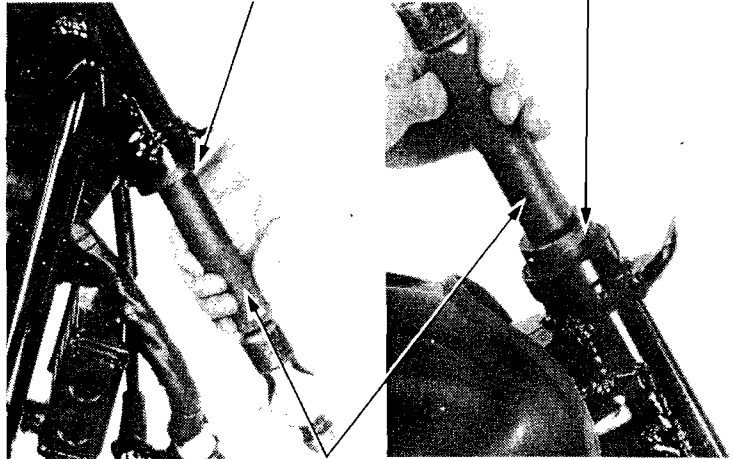

DRIVER 07749-0010000

INSTALLATION

Pack the bearing cavities with grease.
Install the steering stem and lower bearing.

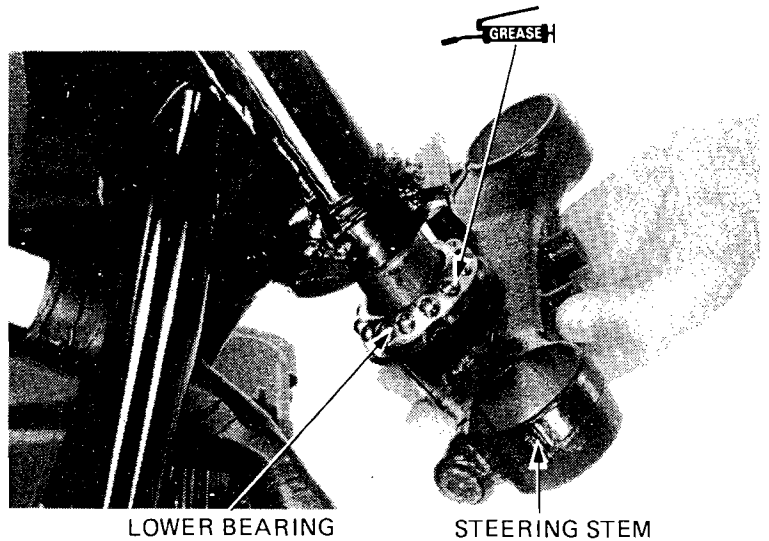

Install the grease retainer, upper bearing, bearing inner race and dust seal.

