



REAR WHEEL/SUSPENSION/BRAKE

TOOLS

Special

Attachment	07967-KC10000
Shock absorber compressor attachment	07959-MB10000
Swing arm lock nut wrench	07908-ME90000
Swing arm bearing remover	07936-4150000 or 07936-3710500
Sliding hammer	07936-3710200 or 07741-0010201
Bearing remover handle	07936-3710100
Socket bit, 17 mm	07703-0020500
Socket bit, 10 mm	07917-3710000 } or commercially available in U.S.A.

Common

Driver	07749-0010000
Attachment, 42 x 47 mm	07746-0010300
Pilot, 20 mm	07746-0040500
Attachment, 32 x 35 mm	07746-0010100
Shock absorber compressor	07959-3290001
Bearing remover collet, 20 mm	07746-0050600
Bearing remover expander	07746-0050100

TROUBLESHOOTING

Wobble or vibration in motorcycle

1. Tire pressure incorrect
2. Faulty tire
3. Bent rim
 - Loose wheel bearing
4. Swing arm bushing worn
6. Wheel out of balance

Soft suspension

1. Weak springs
2. Shock absorbers improperly adjusted

Hard suspension

1. Shock absorbers improperly adjusted
2. Bent shock absorber rod

Suspension noise

1. Loose fasteners
2. Worn shocks