




REAR WHEEL

REMOVAL

Place the motorcycle on its center stand and remove the axle nut.

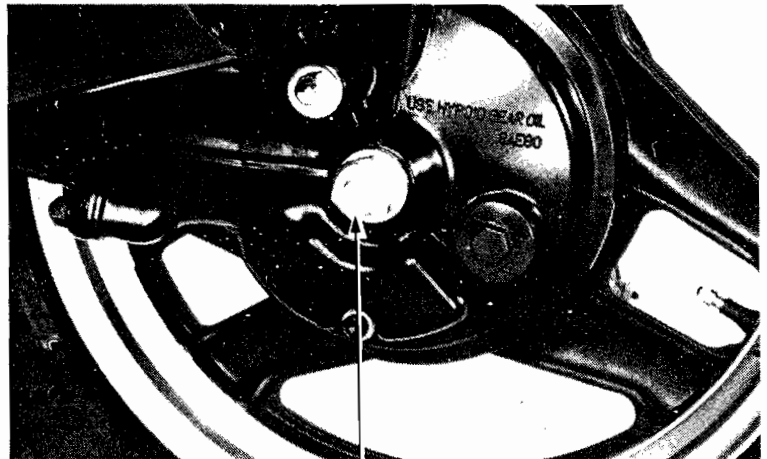


AXLE NUT

Disconnect the brake torque link from the brake panel by removing the cotter pin, nut and bolt.

Remove the brake adjusting nut and disconnect the brake rod from the brake arm.

Loosen the axle pinch bolt and remove the rear axle.

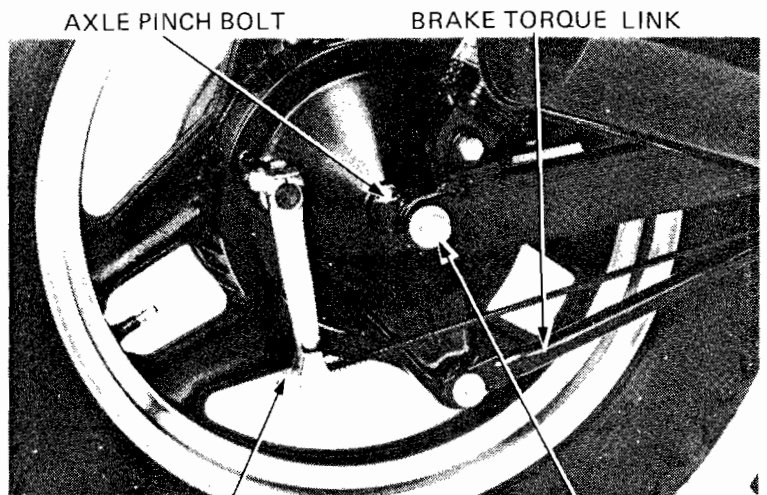

BRAKE ADJUSTING NUT

REAR AXLE

Move the wheel to the right to separate it from the final drive gear case and remove the rear wheel.

