





DISASSEMBLY

Remove the final driven flange from the hub.

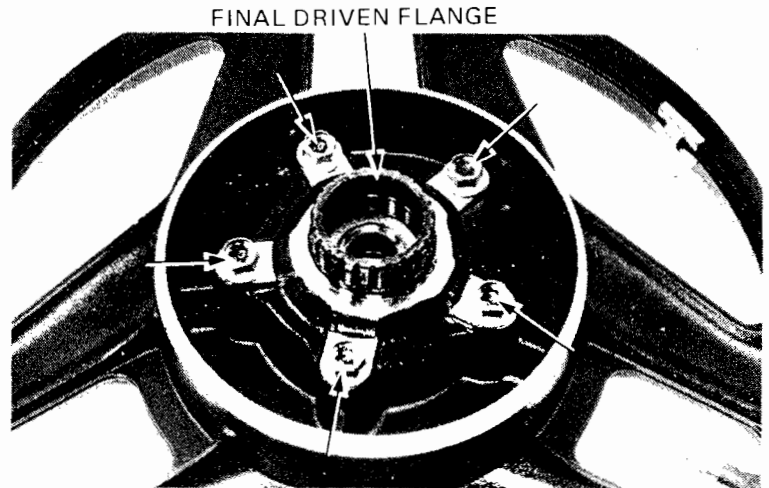

Remove the wheel bearings and the distance collar from the hub with the special tools.

BEARING REMOVER EXPANDER 07746-0050100
or **COMMERCIALLY AVAILABLE** in U.S.A.

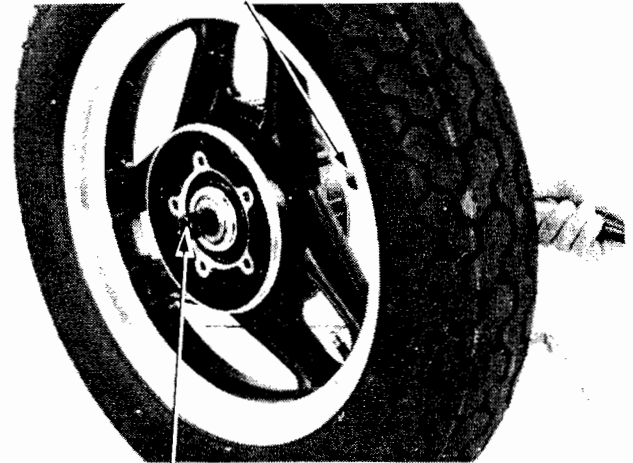

BEARING REMOVER COLLET, 20 mm 07746-0050600
or **COMMERCIALLY AVAILABLE** in U.S.A.

ASSEMBLY

NOTE

The wheel uses a tubeless tire. For tubeless tire repairs, refer to the Tubeless Tire Manual.

NOTE

Use lithium-based multipurpose grease with MoS₂-additive as follows:

- Molykote BR2-PLUS manufactured by Dow Corning, U.S.A.
- Multipurpose M-2 manufactured by Mitsubishi Oil, Japan
- Sta-lube NLGI #2.
- Other lubricants of equivalent quality.

