


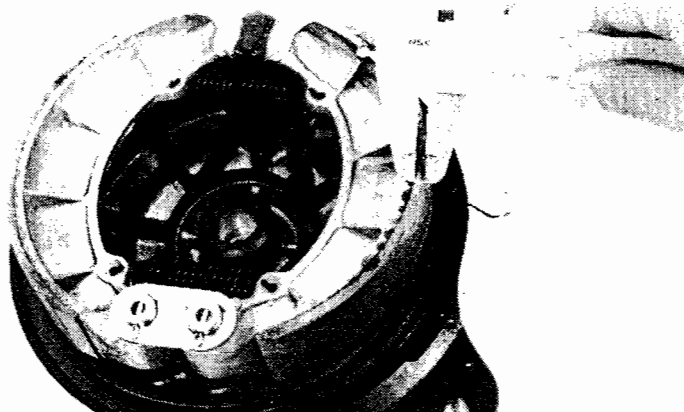

LINING THICKNESS INSPECTION

Measure the rear brake lining thickness.


SERVICE LIMIT: 2.0 mm (0.08 in)



DISASSEMBLY

Remove the rear brake arm.

Remove the cotter pins, brake shoes, springs and brake cam.

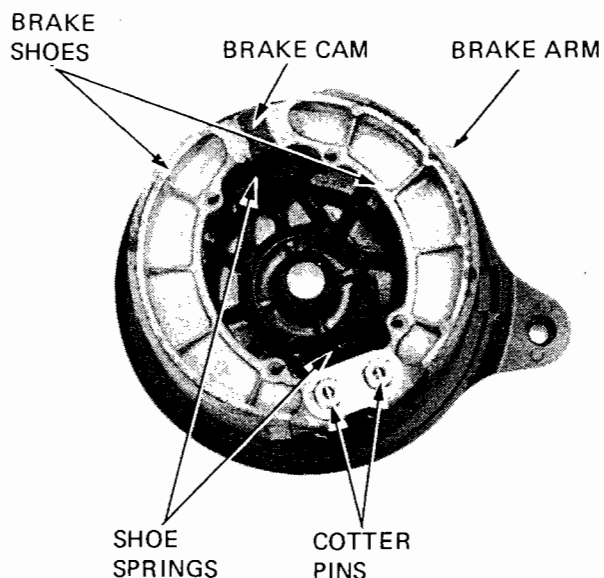

ASSEMBLY

Apply grease to the anchor pins and brake cam.

WARNING

Contaminated brake linings reduce stopping power. Keep grease off the brake linings. Wipe any excess grease off the cam.

