


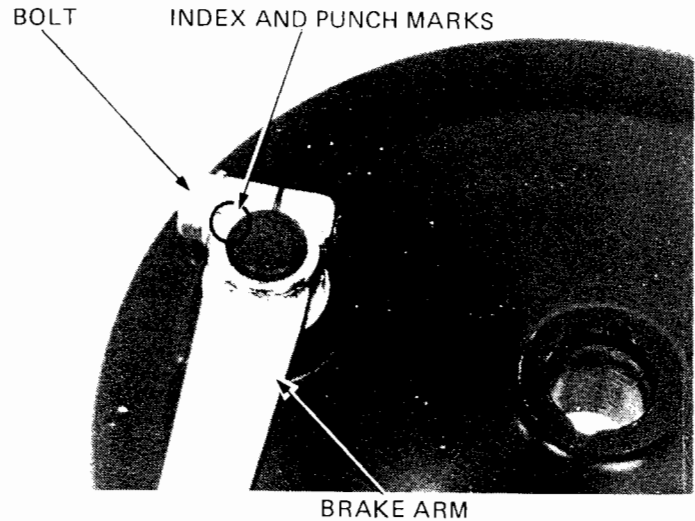

Align the index mark on the brake arm with the punch mark on the brake cam and install the brake arm.
Tighten the brake arm bolt.


TORQUE: 24–30 N·m
(2.4–3.0 kg·m, 17–22 ft·lb)

Place the brake panel into the rear wheel hub and install the rear wheel (Page 15-6).



REAR BRAKE LINKAGE REMOVAL

Remove the right footpeg bolt and footpeg.
Remove the brake pedal bolt and brake pedal.

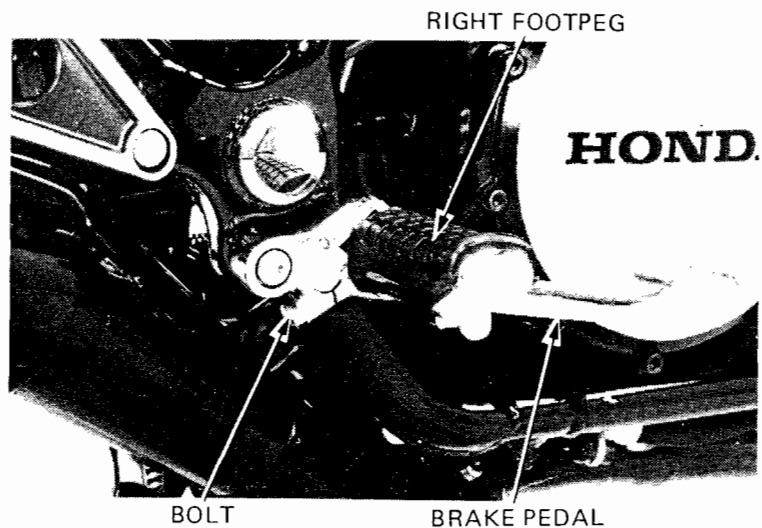

Remove the rear wheel (Page 15-3) and swing arm (Page 15-16).
Remove the brake pedal shaft.
Remove the brake pedal return spring and brake rod from the pedal shaft.

