


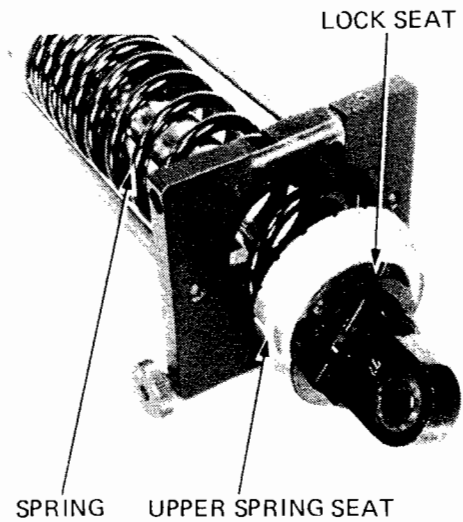

Pull the lock seat out of the shock absorber.
Remove the compressor.

Remove the upper spring seat, spring, lower spring seat and spring adjuster.



SPRING FREE LENGTH

Measure the rear shock absorber spring free length.

SERVICE LIMIT: 261 mm (10.3 in)

