


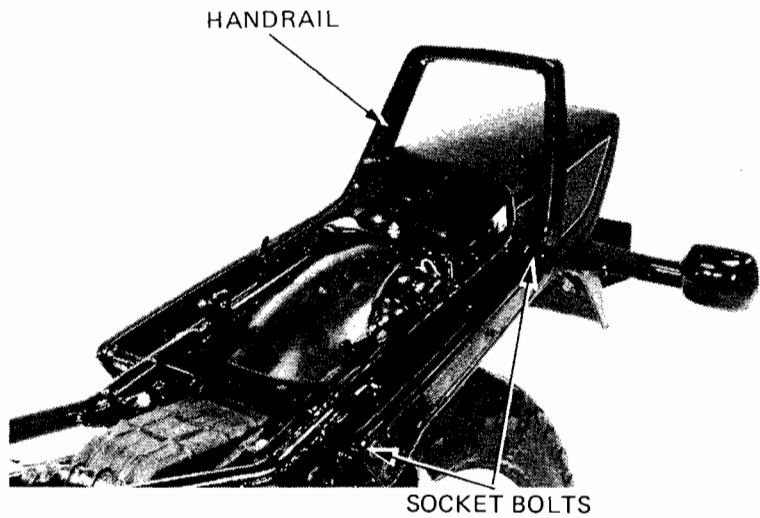

REAR WHEEL/SUSPENSION/BRAKE

Install the handrail with the four socket bolts.
Install the seat.




SWING ARM

REMOVAL

- Remove the following parts:
- rear wheel (Page 15-3).
 - final drive case (Page 13-3).
 - shock absorbers (Page 15-12).

Remove the swing arm pivot caps and loosen the right pivot bolt lock nut.

SWING ARM PIVOT LOCK NUT WRENCH
07908-ME90000

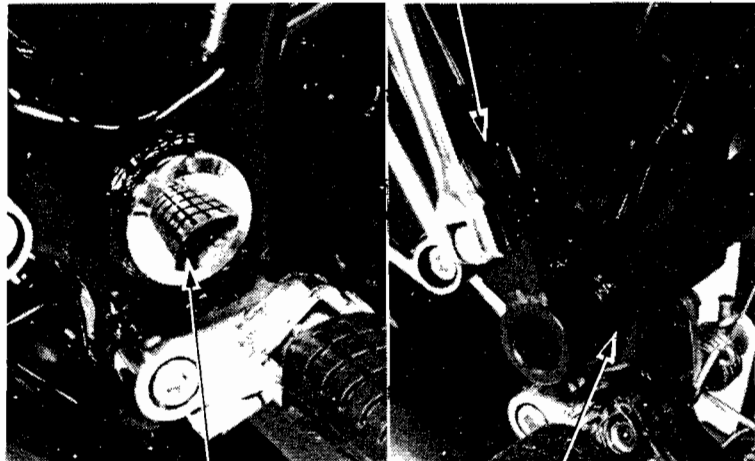

PIVOT CAP

LOCK NUT

RIGHT PIVOT BOLT

Remove the right pivot bolt, using the socket bit.

