




Remove the left pivot bolt and remove the swing arm.

Remove the boot from the swing arm.

LEFT PIVOT BOLT

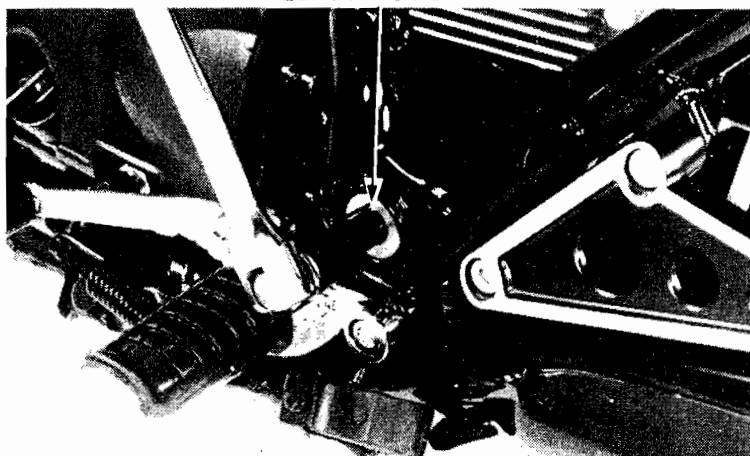

### BEARING REPLACEMENT


Remove the attachment from the special tool, 07936-4150000. Slide the shaft through the left hole and install the attachment onto the shaft. Install the sliding hammer.

Remove the race.

Drive out the right bearing race through the left bearing bore.

BEARING REMOVER  
07936-4150000

SLIDING HAMMER  
07936-3710200 or 07741-0010200

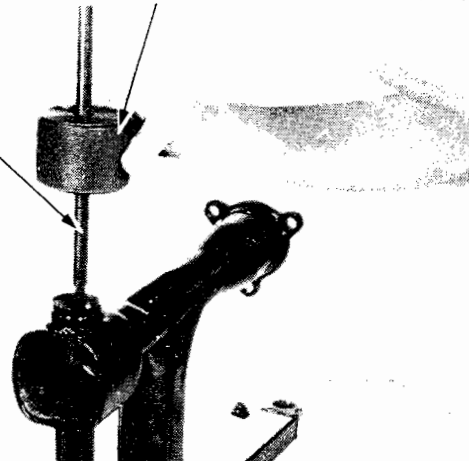

Install new grease retainer plates and drive new bearing outer races into the swing arm.

### NOTE

The left grease retainer has a hole to hold the universal joint when removing and installing the engine.

DRIVER  
07749-0010000

ATTACHMENT, 32 x 35 mm  
07746-0010200

