




**REAR WHEEL/SUSPENSION/BRAKE**

**INSTALLATION**

Apply grease to the pivot bearings dust seals and pivot bolt tips.

Install the bearings and dust seals.


Install the boot onto the swing arm with the "UP" mark facing up.

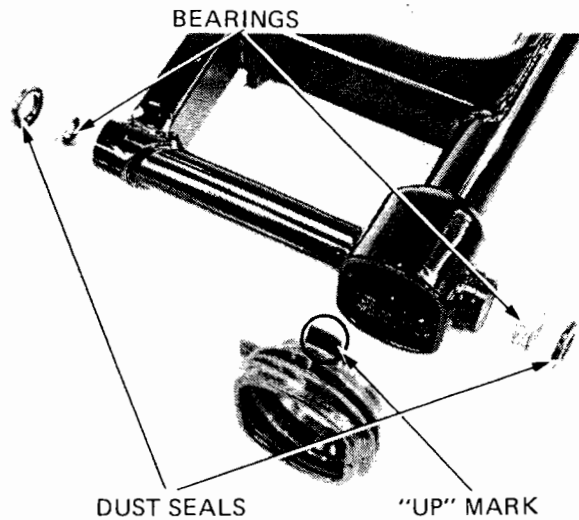

Install the swing arm and pivot bolts.

Tighten the left pivot bolt to the specified torque.

**TORQUE:** 60–80 N·m  
(6.0–8.0 kg·m, 43–58 ft·lb)

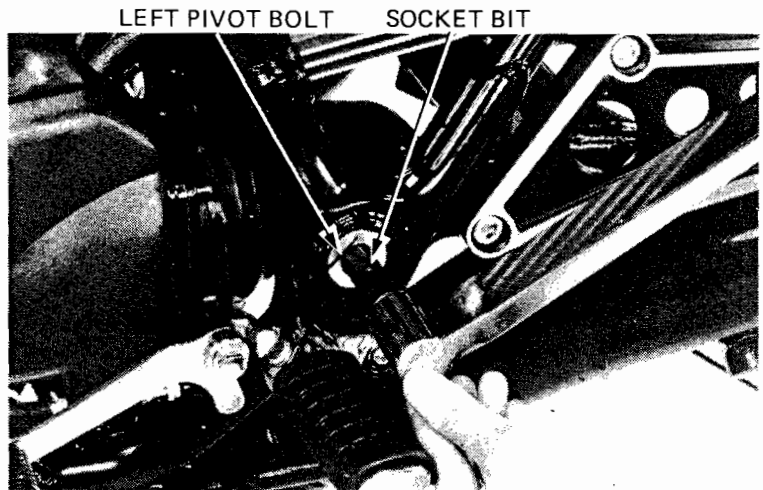

Tighten the right pivot bolt to 40 N·m (4.0 kg·m, 29 ft·lb), loosen it and retighten to the specified torque.

**TORQUE:** 8–12 N·m  
(0.8–1.2 kg·m, 6–9 ft·lb)

Move the swing arm up and down several times. Then, retighten the right pivot bolt to the specified torque.

