




Tighten the lock nut while holding the right pivot bolt.

**TORQUE:** 80–120 N·m  
(8.0–12.0 kg·m, 58–87 ft·lb)

Install the following parts:

- shock absorbers (Page 15-15).
- final drive case (Page 13-19).
- rear wheel (Page 15-6).

SWING ARM PIVOT LOCK NUT WRENCH  
07908–ME90000

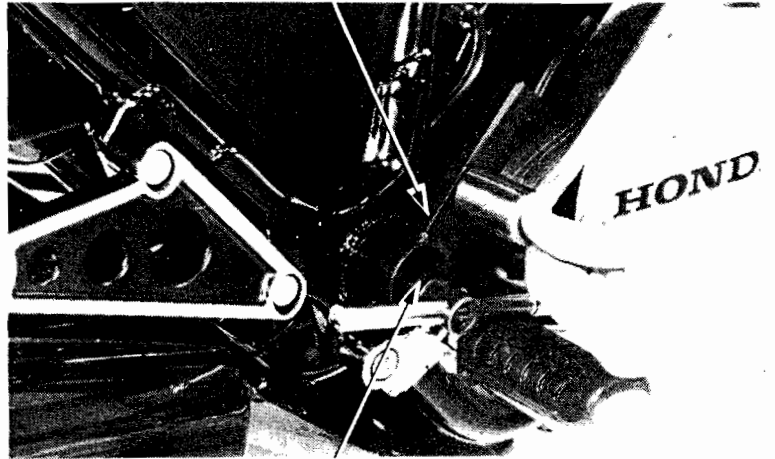

SOCKET BIT