



TROUBLESHOOTING

Brake lever action soft or spongy

1. Air bubbles in hydraulic system
2. Low fluid level
3. Hydraulic system leaking

Brake lever action too hard

1. Sticking piston(s)
2. Clogged hydraulic system
3. Pads glazed or worn excessively

Brakes drag

1. Hydraulic system sticking
2. Sticking piston(s)

Brake grab or pull to one side

1. Pads contaminated
2. One side of front brake faulty
3. Disc or wheel misaligned

Brake chatter or squeal

1. Pads contaminated
2. Excessive disc runout
3. Caliper installed incorrectly
4. Disc or wheel misaligned