




BRAKE PAD/DISC

PAD REPLACEMENT

NOTE


Always replace the brake pads as a set to assure even disc pressure.

Remove the pad pin retainer bolt.
Remove the caliper bolt and pivot bolt.
Remove the caliper.

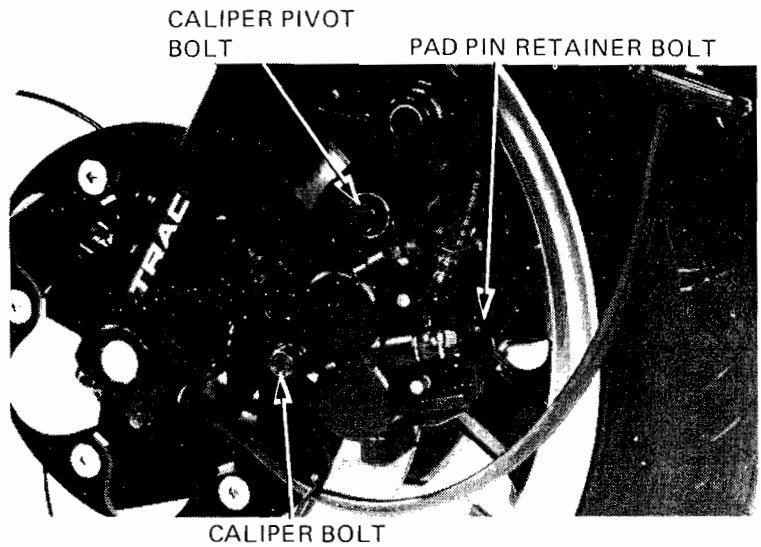

Remove the pad pin retainer and pull the pad pins out of the caliper.

Remove the brake pads.

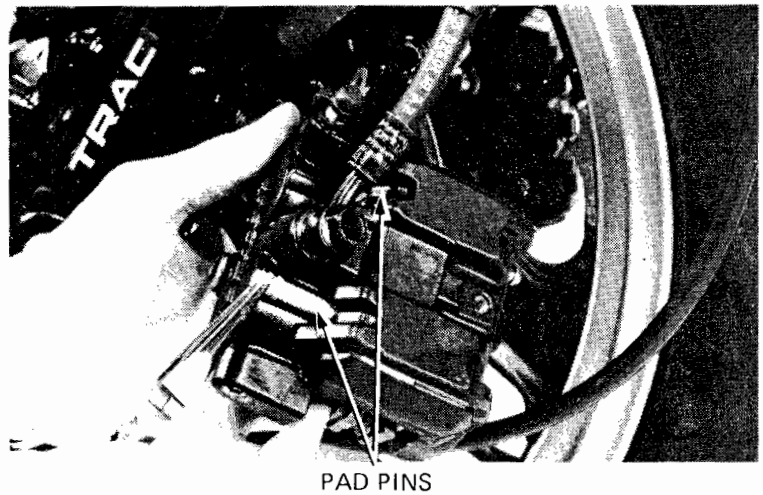

Position the pad spring in the caliper as shown and push the caliper pistons in all the way.

