




DISC THICKNESS

Measure the thickness of each disc.


SERVICE LIMIT: 4.0 mm (0.16 in)

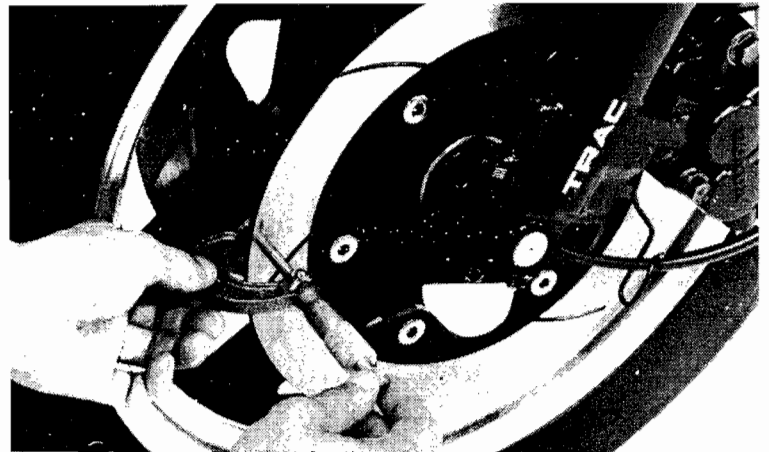

BRAKE DISC WARPAGE

Measure brake disc for warpage.

SERVICE LIMIT: 0.30 mm (0.012 in)

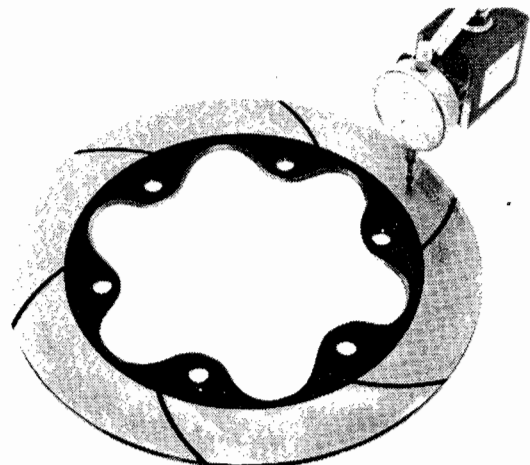

MASTER CYLINDER

DISASSEMBLY

Drain brake fluid from the hydraulic system.
Remove the brake lever and rear view mirror from the master cylinder. Disconnect the brake hose.

CAUTION

*Avoid spilling brake fluid on painted surfaces.
Place a rag over the fuel tank whenever the
brake system is serviced.*

NOTE

*When removing the hose bolt, cover the end
of the hose to prevent contamination.
Secure the hose to prevent fluid from leaking
out.*

Disconnect the front brake switch wires.
Remove the front brake master cylinder.

