




Remove the piston boot and the snap ring from the master cylinder body.

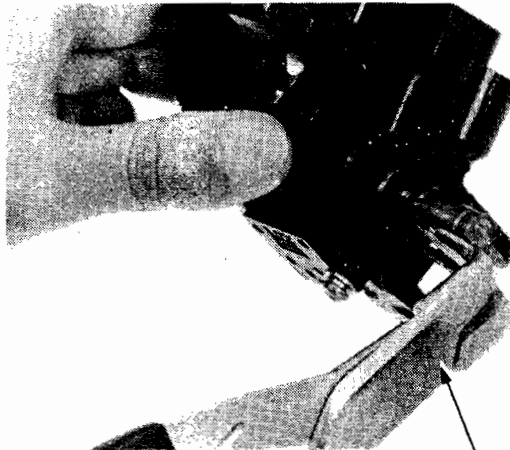


SNAP RING PLIERS or EQUIVALENT COMMERCIALLY AVAILABLE in U.S.A. 07914-3230001

Remove the secondary cup and piston. Then remove the primary cup and spring.

Remove the brake light switch from the master cylinder body, if necessary.

Clean the inside of the master cylinder and reservoir with brake fluid.

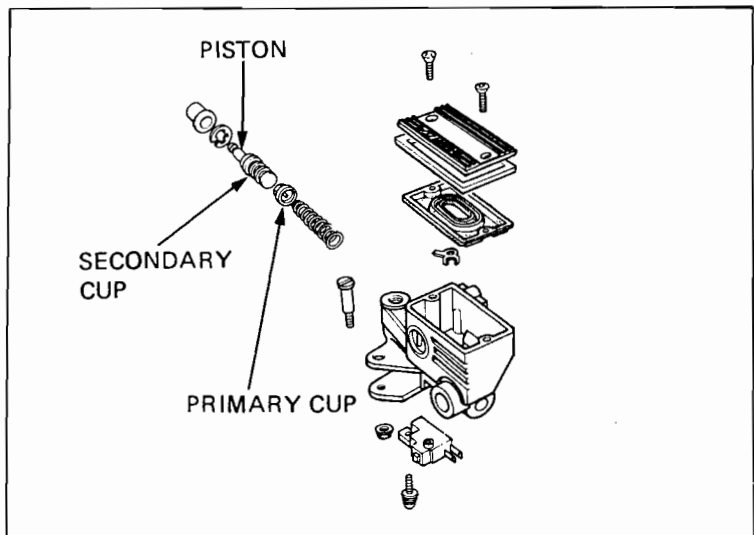

INSPECTION

Check the master cylinder for scores, scratches or nicks.

Measure the master cylinder I.D.

SERVICE LIMIT: 15.93 mm (0.627 in)

