


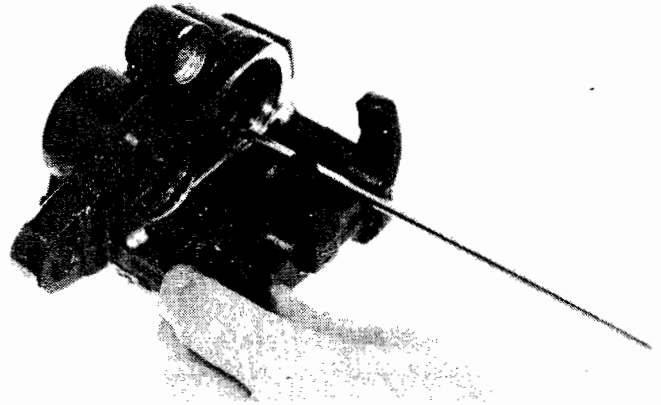

Push the piston seals in and lift them out, then discard them.
Clean the piston seal grooves with brake fluid.

CAUTION


Be careful not to damage the piston sliding surfaces.



PISTON INSPECTION

Check the pistons for scoring, scratches or other faults. Measure the piston diameter with a micrometer.

SERVICE LIMIT: 31.940 mm (1.2578 in)

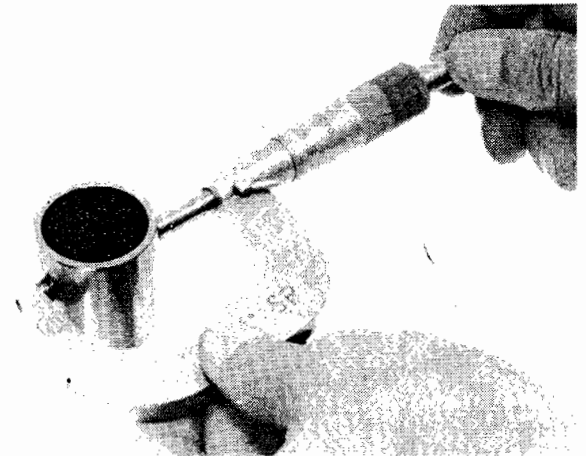

CYLINDER INSPECTION

Check the caliper cylinder for scoring, scratches or other faults. Measure the caliper cylinder bore.

SERVICE LIMIT: 32.090 mm (1.2634 in)

