





CALIPER BRACKET REMOVAL

Remove the caliper (Page 16-10).

Right caliper bracket: Remove the two caliper bracket bolts and bracket from the right fork leg.

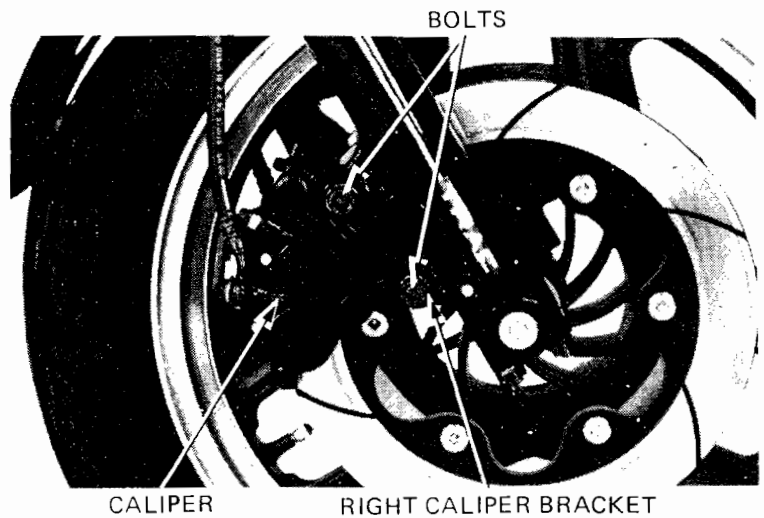

Left caliper bracket: Remove the upper mount socket bolt, anti-dive piston pin bolt and bracket. Remove the bracket pivot pin from the fork leg upper mount.

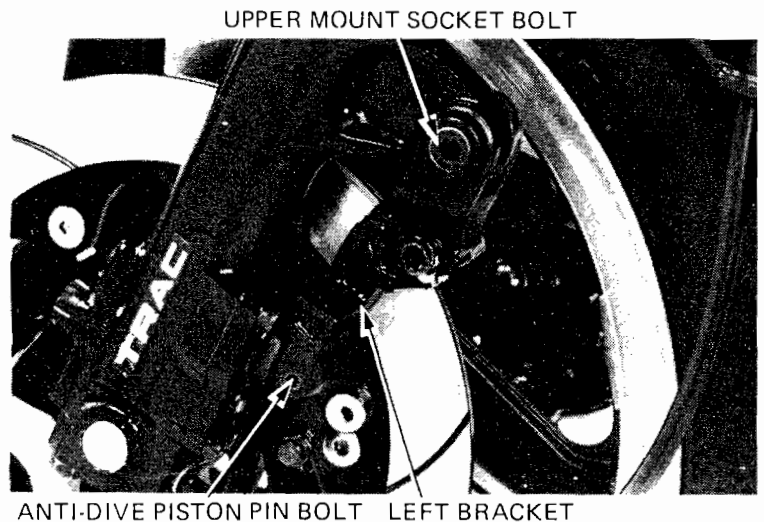

CALIPER BRACKET INSTALLATION

Install the caliper bracket in the reverse order of removal.

Replace the O-rings on the left bracket pivot pin with new ones.

Apply grease to the left bracket pivot pin before installation.

TORQUE:

RIGHT BRACKET MOUNT BOLTS:

35–45 N·m (3.5–4.5 kg·m, 25–33 ft·lb)

LEFT BRACKET UPPER MOUNT BOLT:

35–45 N·m (3.5–4.5 kg·m, 25–33 ft·lb)

ANTI-DIVE PISTON PIN BOLT:

10–14 N·m (1.0–1.4 kg·m, 7–10 ft·lb)

