




MUFFLER

REMOVAL

Remove the exhaust pipe joint nuts.



EXHAUST PIPE JOINT NUTS

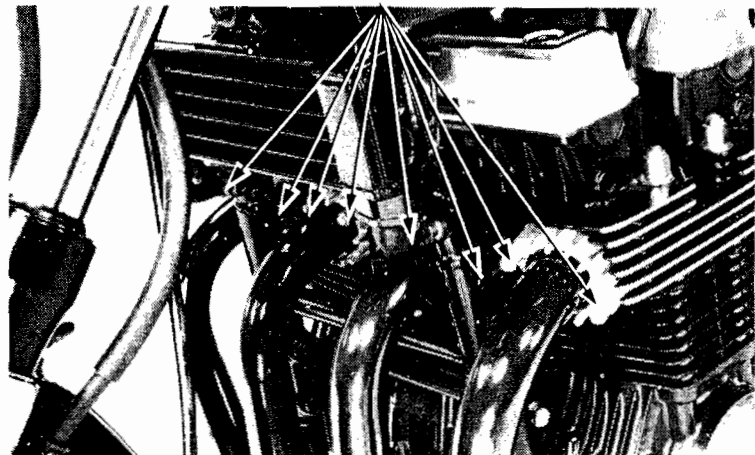

Loosen the exhaust pipe clamp bolt.
Remove the muffler bracket bolts, rear muffler mount bolts and brackets.
Remove the lower muffler mount bolts and remove the right and left mufflers.

LOWER MUFFLER
MOUNT BOLTS

REAR MUFFLER MOUNT BOLT

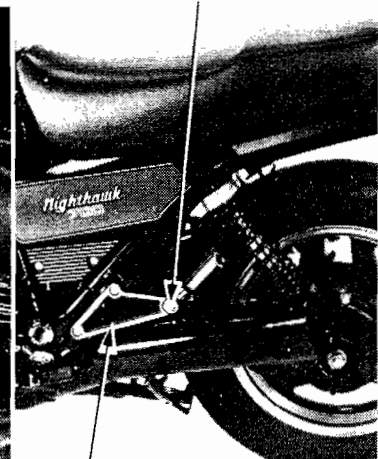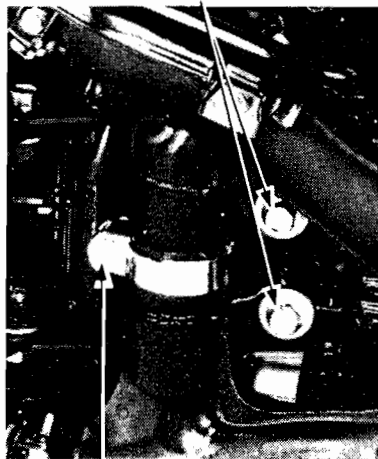

INSTALLATION

Check the muffler joint gasket for damage and replace if necessary.

Temporarily install the mufflers in the reverse order of removal.

Tighten the exhaust pipe joint nuts.

TORQUE: 8–14 N·m
(0.8–1.4 kg-m, 6–10 ft-lb)

Tighten the exhaust pipe clamp bolt.

TORQUE: 18–28 N·m
(1.8–2.8 kg-m, 13–20 ft-lb)

Tighten the rear muffler mount bolts.
Tighten the muffler lower mount bolts.

TORQUE: 45–65 N·m
(4.5–6.5 kg-m, 33–48 ft-lb)

Start the engine and make sure that there are no exhaust leaks.

EXHAUST PIPE CLAMP BOLT

MUFFLER BRACKET

