



SERVICE INFORMATION	18-1
TROUBLESHOOTING	18-2
BATTERY	18-3
CHARGING SYSTEM	18-4
ALTERNATOR	18-5
VOLTAGE REGULATOR/RECTIFIER	18-9

SERVICE INFORMATION

GENERAL

- Battery fluid level should be checked regularly. Fill with distilled water when necessary.
- Quick charge a battery, only in an emergency. Slow-charging is preferred.
- Remove the battery from the motorcycle for charging. If the battery must be charged on the motorcycle, disconnect the battery cables.

WARNING

Do not smoke, and keep flames away from a charging battery. The gas produced by a battery will explode if a flame or spark is brought near.

- All charging system components can be tested on the motorcycle.

SPECIFICATIONS

Battery	Capacity	12V 14 AH
	Specific gravity	1.270-1.290/20°C (68°F)
	Charging rate	1.4 amperes maximum
Alternator capacity		5 A min. at 2,000 rpm
Voltage regulator		Transistorized non-adjustable

TOOLS

Special Rotor puller 07933-2160000

TORQUE VALUE

Alternator rotor bolt 30-38 N·m (3.0-3.8 kg·m, 22-28 ft·lb)