





ALTERNATOR REMOVAL

Remove the frame left side cover.
Disconnect the alternator coupler.

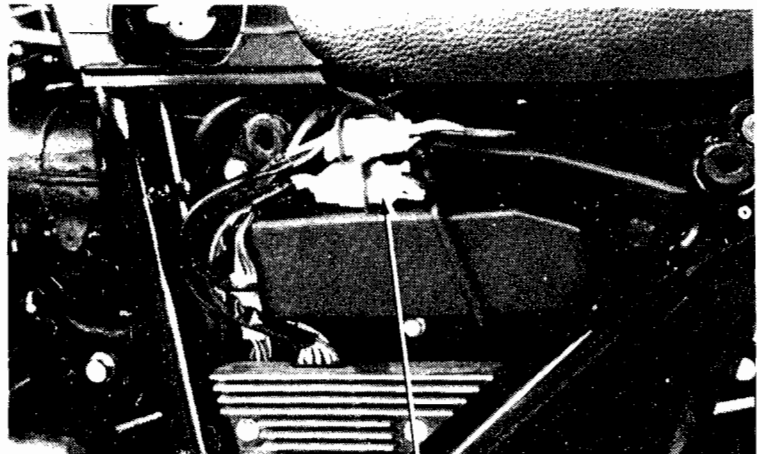


ALTERNATOR COUPLER

Remove the alternator cover by loosening three bolts.

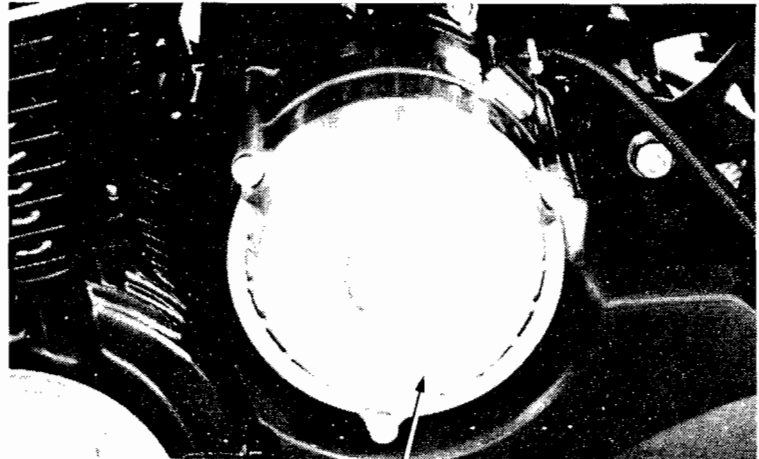

ALTERNATOR COVER

Shift the transmission into gear and apply the rear brake.
Remove the alternator rotor bolt, fan, rotor B and stator.

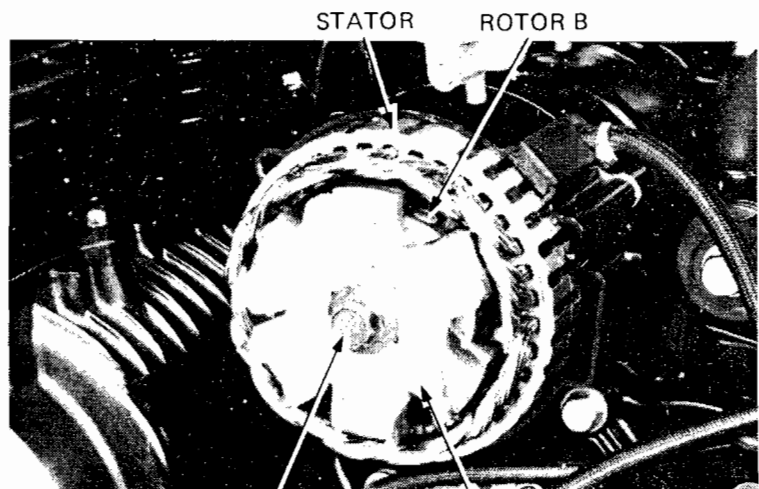

ROTOR BOLT FAN