




BATTERY/CHARGING SYSTEM


Install alternator rotor A.

Install the alternator stator with the painted groove on the stator coil aligned with upper left groove for the alternator cover mounting bolts.

Install rotor B with its hole aligned with the boss on rotor A.

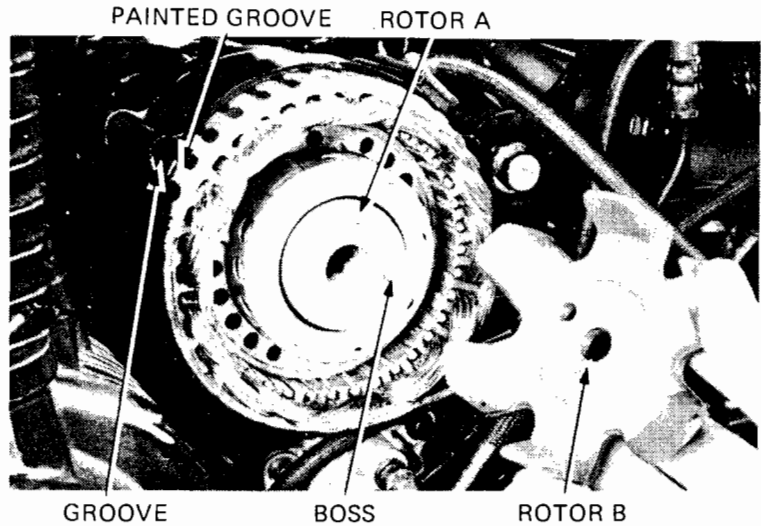

Install the alternator fan with its holes aligned with the pins on rotor B.

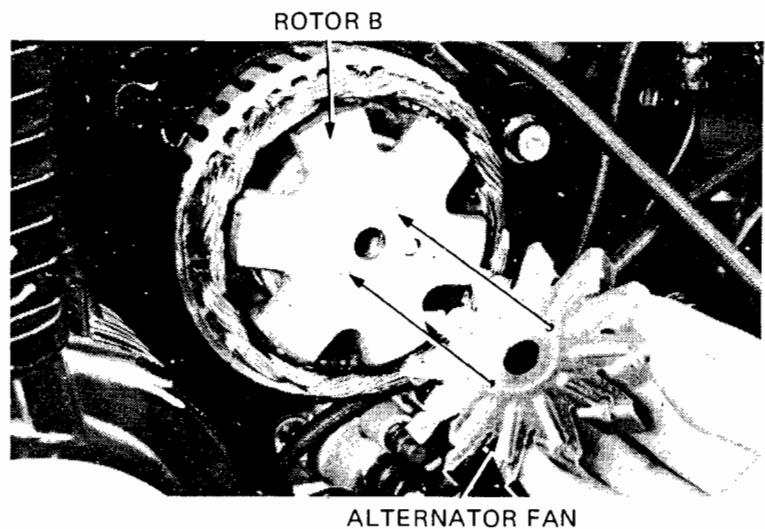

Install and tighten the alternator bolt to the specified torque.

TORQUE: 30–38 N·m
(3.0–3.8 kg·m, 22–28 ft·lb)

