



IGNITION SYSTEM

Remove the pulse generator mounting screws, pulse generators and wire guide.

Install new pulse generators and wire guide.

Align the pulse rotor tip with the pulse generator magnet and measure the air gap with a feeler gauge.

AIR GAP: 0.4 – 1.1 mm (0.02 – 0.04 in)

Check the ignition timing (Page 3-9).

Install the left crankcase rear cover and pulse generator cover.

PULSE GENERATORS



WIRE GUIDE

AIR GAP

SPARK UNIT

If the pulse generators, ignition coils and wiring are good, and the ignition timing is not within specification; replace the spark unit with a new one and recheck the ignition timing.

