




ELECTRIC STARTER


FIELD COIL INSPECTION

Check for continuity from the cable terminal to the motor case and from the cable terminal to the brush wire. Replace the starter motor if the field coil is not continuous or if it is shorted to the motor case.

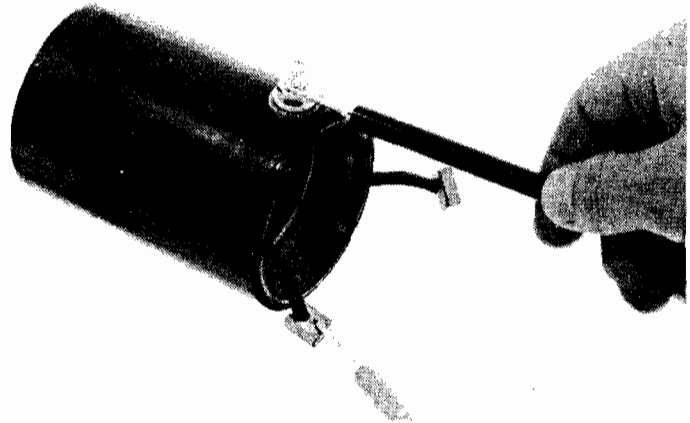

ASSEMBLY/INSTALLATION

Assemble the starter motor. Align the case notch with the brush holder pin.

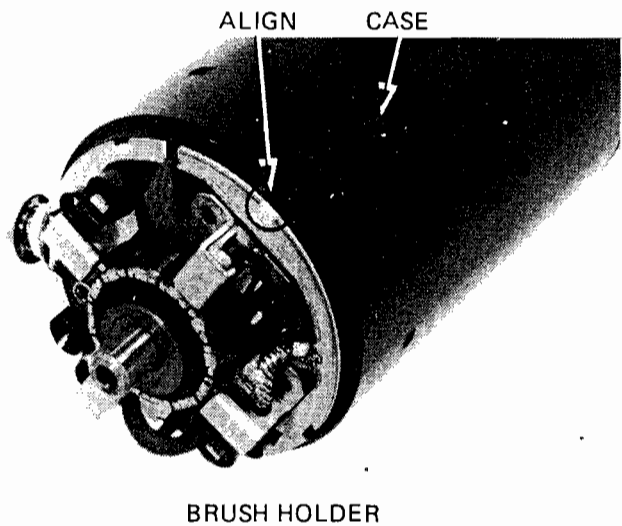

Install the rear cover aligning its slot with the brush holder pin.

