




CLUTCH DIODE

REMOVAL

Remove the fuel tank.

Remove the clutch diode from the wire harness.

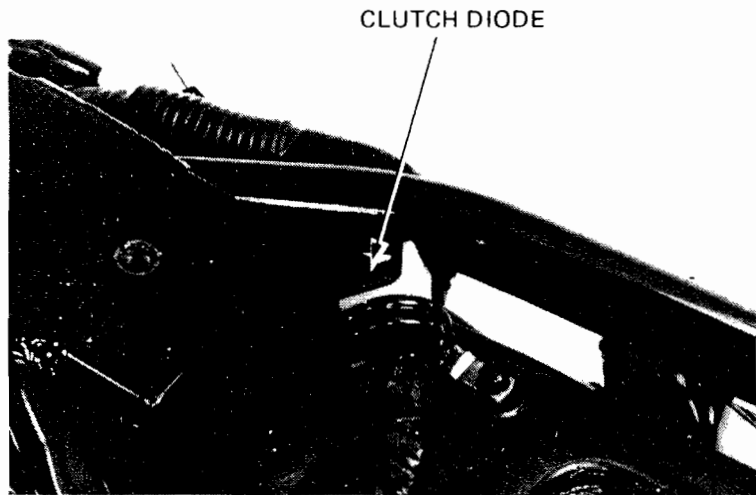

INSPECTION

Check for continuity with an ohmmeter.

NORMAL DIRECTION: CONTINUITY
REVERSE DIRECTION: NO CONTINUITY

Replace the diode if it does not meet specifications.

