




**LIGHTS/INSTRUMENTS/SWITCHES**

**REMOVAL/INSTALLATION**

Remove the headlight (Page 21-2) and instruments (Page 21-3).


Disconnect the ignition switch wire coupler. Remove the two ignition switch mounting bolts and the switch.

Install the ignition switch in the reverse order of removal.

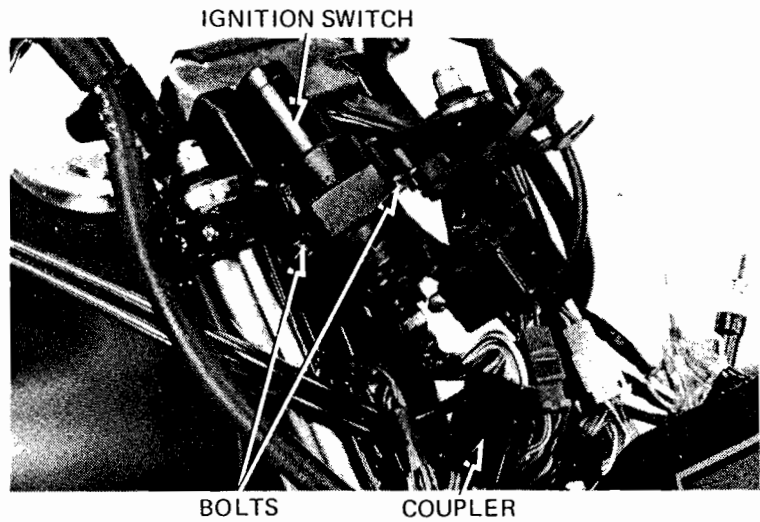

**DISASSEMBLY/ASSEMBLY**

Open the wire clamp tongue up and remove the clamp.

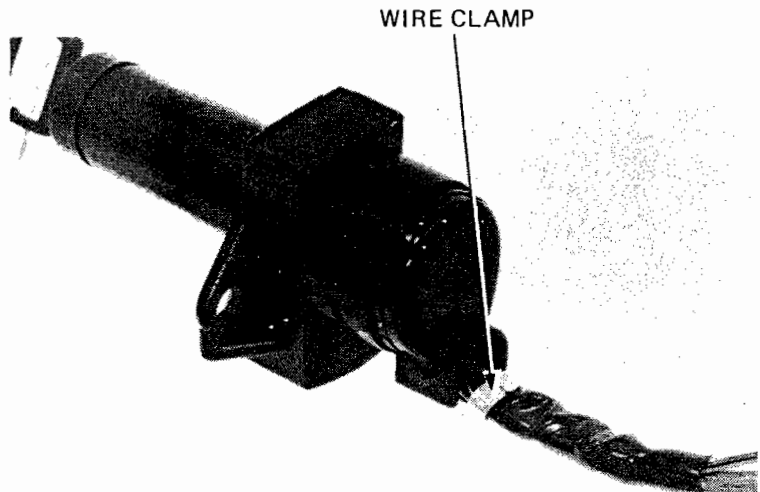

Insert the ignition key and turn it to between the ON and OFF detent positions.

