



LIGHTS/INSTRUMENTS/SWITCHES

BRAKE LIGHT SWITCHES

FRONT


Disconnect the wires from the front brake light switch.

Check the front brake light switch for continuity with the front brake applied.

Replace the switch if necessary.

BRAKE APPLIED: CONTINUITY
BRAKE NOT APPLIED: NO CONTINUITY

FRONT BRAKE LIGHT SWITCH

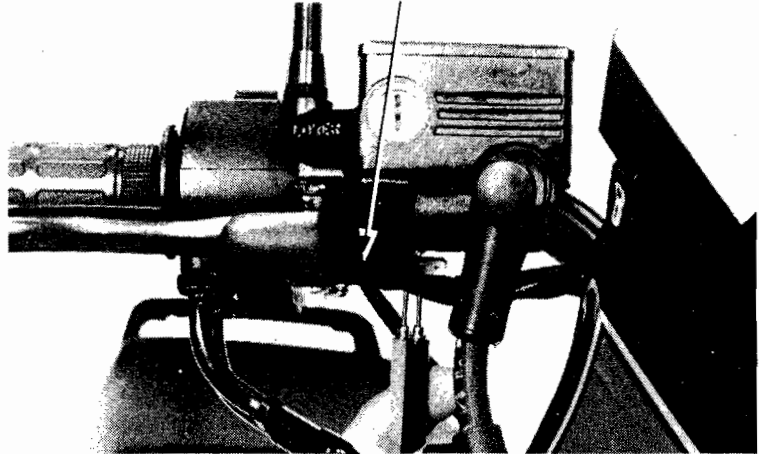


REAR

Remove the right side cover.
Disconnect the switch wire coupler.

Check the rear brake light switch for continuity with the rear brake applied.

BRAKE APPLIED: CONTINUITY
BRAKE NOT APPLIED: NO CONTINUITY


REAR BRAKE LIGHT SWITCH COUPLER

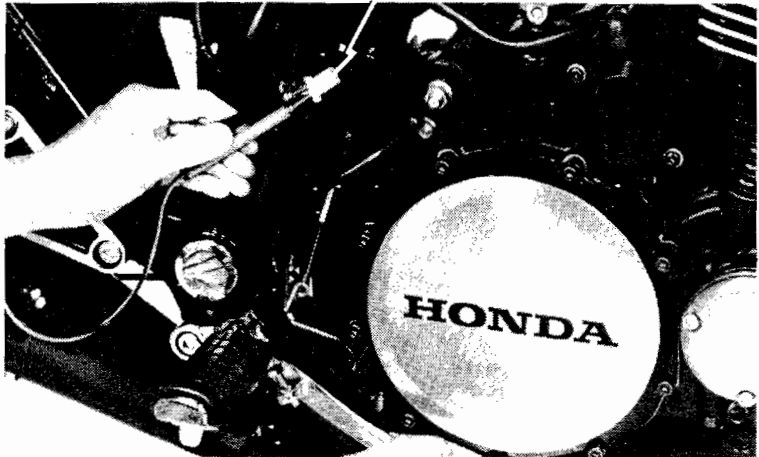

GEAR POSITION SWITCH

Remove the left side cover and disconnect the gear position switch coupler.
Check for continuity between each terminal and ground in each gear position.

Color Code	Y	G	Bk.	W	R	Br	B	Ground
1st	○	---	---	---	---	---	---	○
N		○	---	---	---	---	---	○
2nd			○	---	---	---	---	○
3rd				○	---	---	---	○
4th					○	---	---	○
5th						○	---	○
OD							○	○

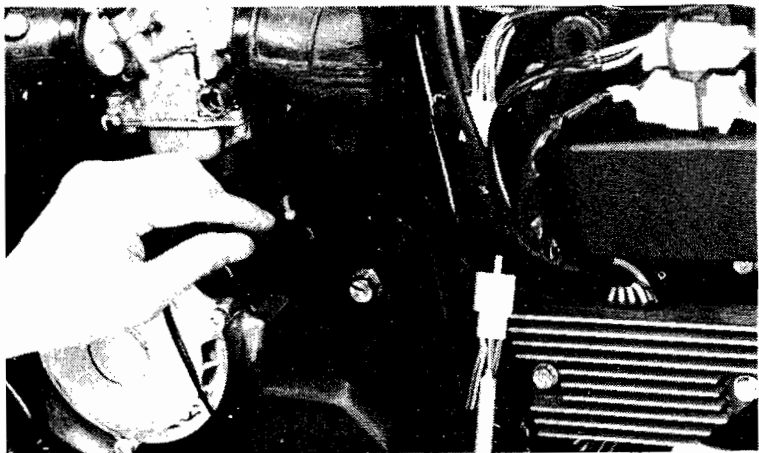

Refer to Page 9-2 for gear position switch replacement.