



CLUTCH SWITCH


Disconnect the wire leads from the clutch switch.

Check the continuity of the clutch (safety) switch with the clutch released and applied.

Replace if necessary.

LEVER APPLIED: CONTINUITY

LEVER NOT APPLIED: NO CONTINUITY

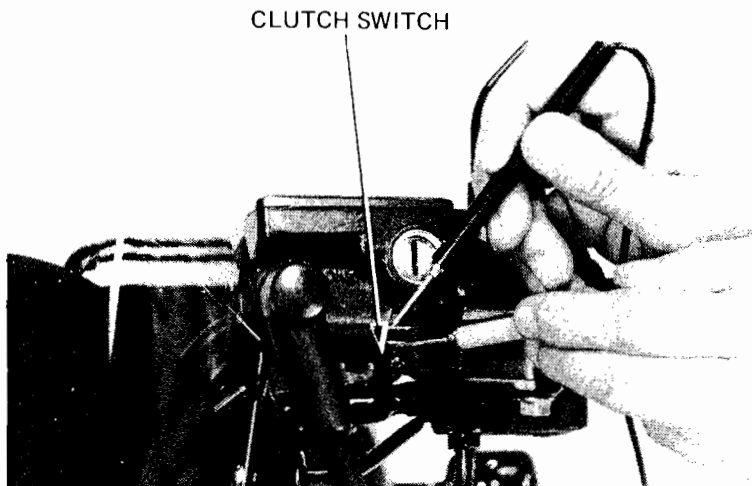

HANDLEBAR SWITCHES


Open the headlight cover.

Disconnect the couplers and connectors.

Check continuity between the color coded wires in each chart.

TURN SIGNAL/PASSING SWITCH

Color Code	Gr	LB	O	Br/B	LB/W	O/W	P	LG/W
Terminal	W	R	L	P	PR	PL	E	W OFF
R	○	○		○	○		○	○
L	○		○				○	○
PUSH								○

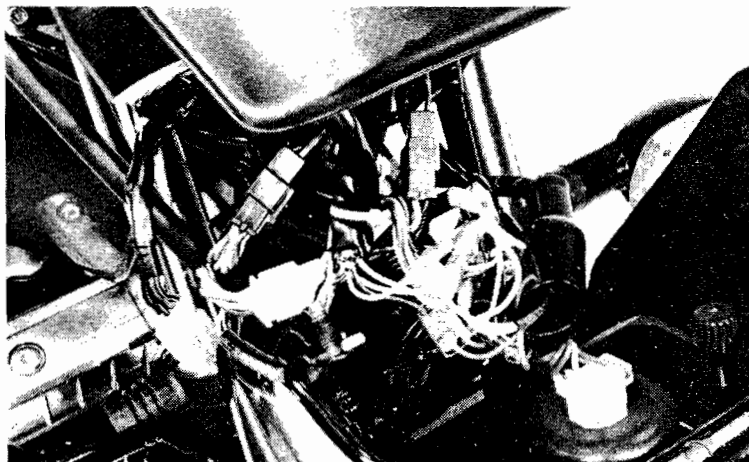

Color Code	B/W	W	B
Terminal	HL	Lo	Hi
Lo	○	○	
(N)	○	○	○
Hi	○		○

HORN BUTTON

Color Code	LG	W/G
Terminal	Ho	BAT3
BUTTON OUT		
PUSHED	○	○

