




LIGHTS/INSTRUMENTS/SWITCHES

ENGINE STOP SWITCH

Color Code	Bk/W	Bk
Terminal	IGN	BAT2
OFF		
RUN	○ — ○	○
OFF		

STARTER BUTTON

Color Code	Bk	Y/R	B/W	Bk/R
Terminal	BAT2	ST	HL	BAT5
BUTTON OUT			○ — ○	
PUSHED	○ — ○			

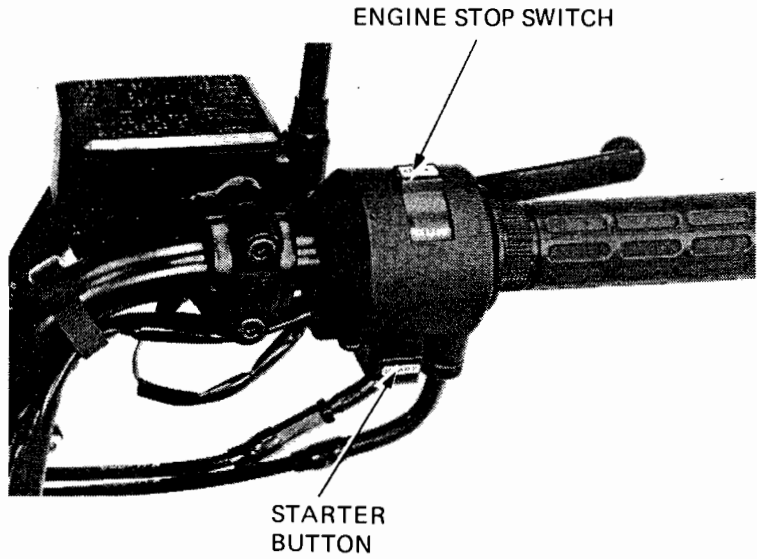


FUEL SENSOR/METER

Remove the fuel tank.

Remove the fuel sensor nuts and remove the sensor.

NOTE

Be careful not to bend the float arm.

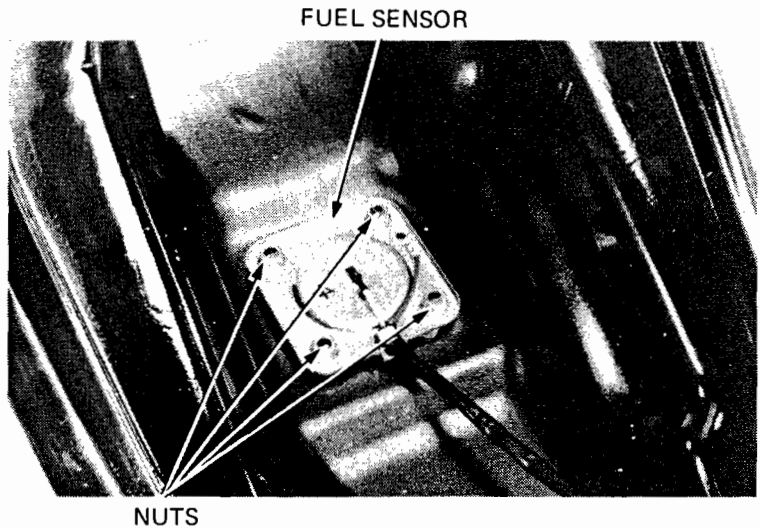

FUEL SENSOR INSPECTION

Connect the ohmmeter to the fuel sensor coupler.

Inspect the resistance of the float at the top and bottom positions.

FLOAT POSITION	RESISTANCE
TOP (FULL)	4 – 10 Ω
BOTTOM (EMPTY)	90 – 100 Ω

