



## TAILLIGHT SENSOR

Remove the seat, handrail and rear cowl (Page 17-3).

Disconnect the taillight sensor coupler.

Turn the ignition switch ON and check that the taillight warning light comes on.


If the warning light does not come on, check voltage at the black/brown and green terminals of the taillight sensor coupler.

If there is no voltage, check and repair the circuit wiring and connections.

If there is voltage, measure the voltage at the white/yellow (positive) and green (negative) terminals.

**VOLTAGE: 9-14 V**

If there is no voltage between these terminals, replace the taillight sensor with a new one.

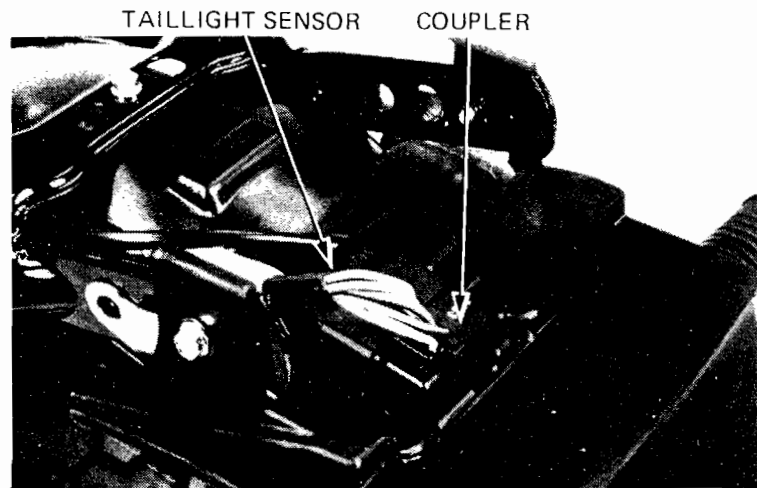

## TURN SIGNAL

### BULB REPLACEMENT

Remove the lens screws and lens.

Replace the bulb.

Install the lens and tighten the screws.

