





TAIL/BRAKE LIGHT

BULB REPLACEMENT

Remove the two taillight lens mounting screws and lens.

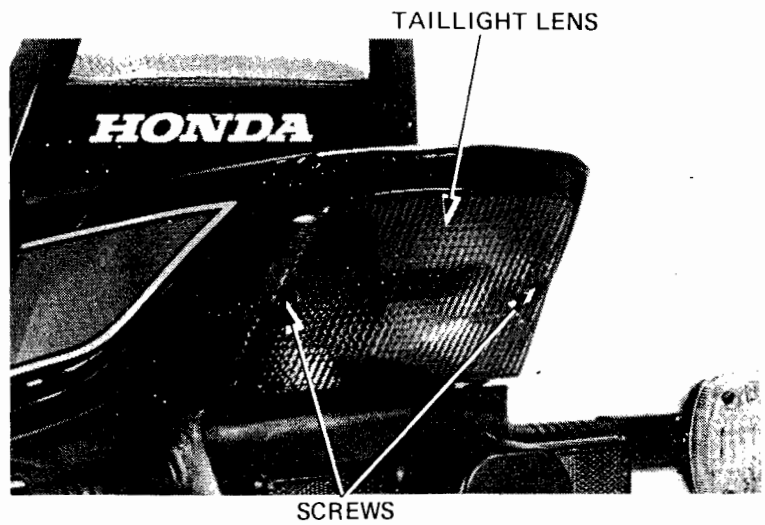

Replace the bulb with a new one.
Install the taillight lens and tighten the screws.

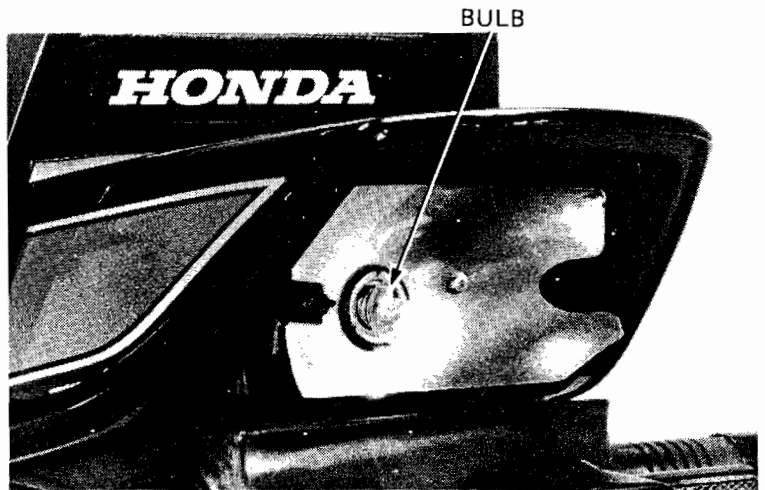

REMOVAL/INSTALLATION

Disconnect the taillight wire coupler.
Remove the taillight mounting screw and the taillight assembly.

