

Fig. 20-7 ① Throttle cable  
② Lock nuts

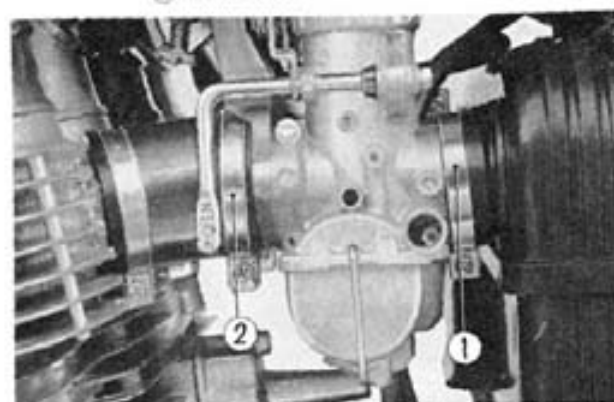


Fig. 20-8 ① Air cleaner connecting band  
② Carburetor insulator band

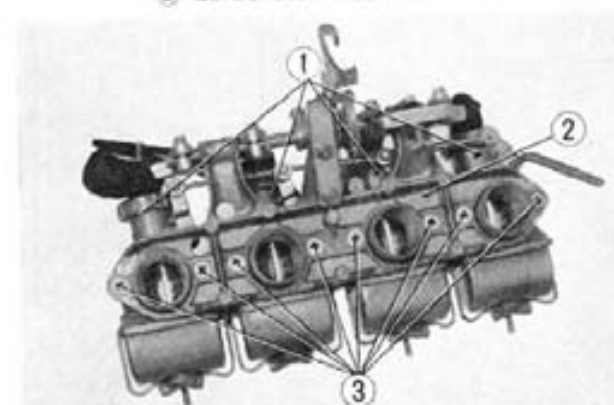


Fig. 20-9 ① Carburetor ③ Setting screws  
② Carburetor stay plate

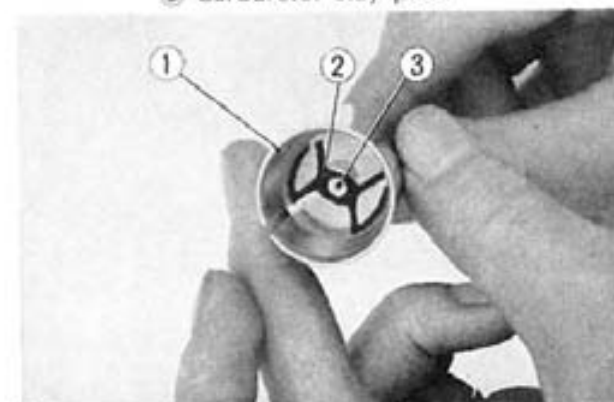


Fig. 20-10 ① Throttle valve ③ Jet needle  
② Needle set plate

## DISASSEMBLY

1. Turn the fuel tank valve to the "STOP" position, remove the fuel lines from the fuel valve body, raise the seat and pull the rear tank rubber mounting away from the rear tank mount. Remove the fuel tank.
2. Disconnect the throttle cables from the link lever, loosen the air cleaner connecting tube and insulator bands and then remove the carburetors as an assembly.
3. Unscrew two 6 mm screws and dismount the respective carburetor from the stay plate. Disconnect the individual choke rod and separate the carburetors.
4. In order to remove the needle jet from the throttle valve, remove the needle set plate.