

3. Remove the 6mm breather element case mounting bolt (4) and remove the breather element.
4. Remove the two screws (6) and pull out the breather element (7) from the breather element case.
5. Wash the breather element (7) in clean solvent.
Squeeze out excess solvent and then dry the element thoroughly.

WARNING: Gasoline or low flash point solvents are highly flammable and must not be used to clean the breather element.

6. To reinstall the air cleaner, reverse the removal procedure.

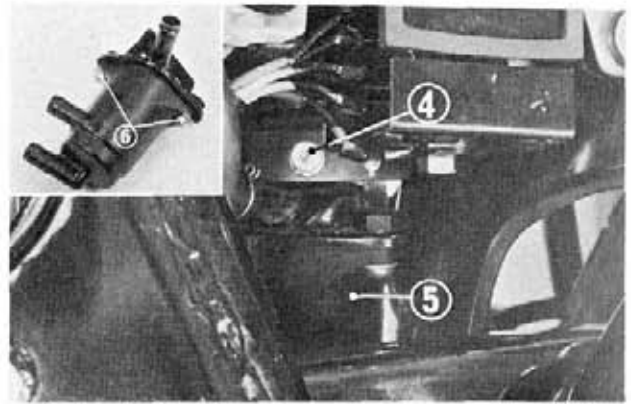


Fig. 6 ④ Breather element case mounting bolt
⑤ Breather element case ⑥ Screws

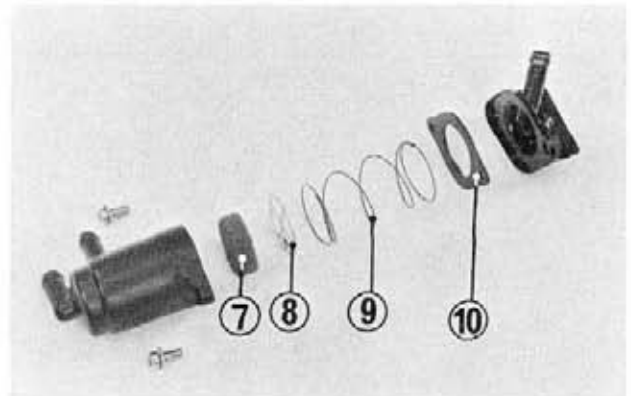


Fig. 7 ⑦ Breather element
⑧ Element retaining plate
⑨ Spring ⑩ Cover gasket

FRONT BRAKE

Disassembly

Caliper

1. Remove the caliper as an assembled unit.
2. To separate the calipers A and B, remove the caliper setting bolts.
To service the calipers mounted on the motorcycle, remove the oil pipe from the caliper beforehand.

With the wheel bearing in place insert the axle shaft through the bearing. Place the axle shaft on V blocks, holding the wheel vertical. Check carefully for runout while rotating the wheel by hand.

	Standard value	Service limit
Surface runout	0.5mm max.	2.0mm min.
Radial runout	0.5mm max.	2.0mm min.

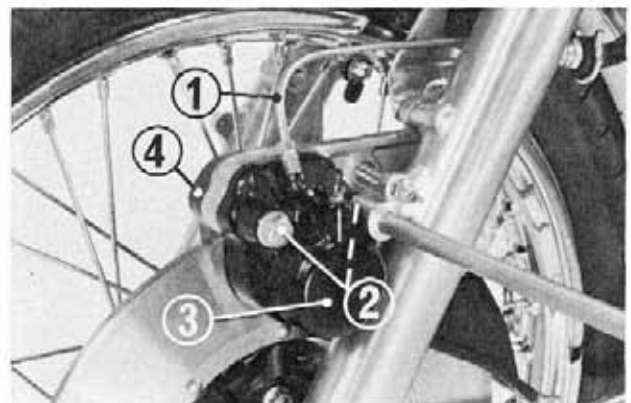


Fig. 8 ① Oil pipe ② Caliper setting ③ Caliper A
④ Caliper B

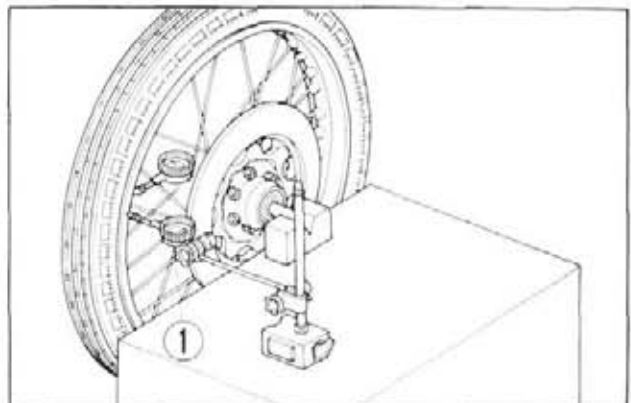


Fig. 9 ① Dial gauge