

Fig. K7-4 ① Bolt ② Rear stay ③ Choke relief spring ④ Choke lever

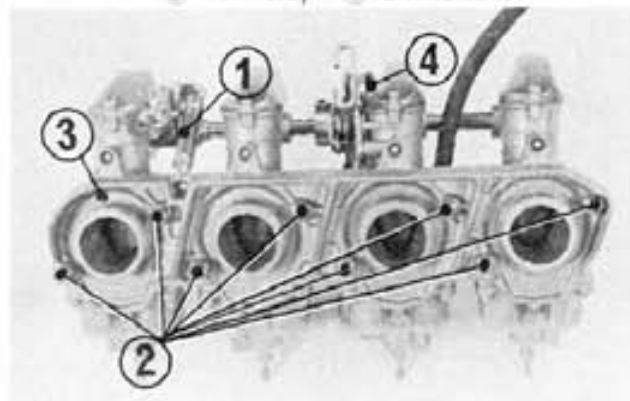


Fig. K7-5 ① Throttle return spring ② Screw ③ Stay plate ④ Accelerator pump spring



Fig. K7-6 ① Link arm fixing screw ② Set screw ③ Lock nut

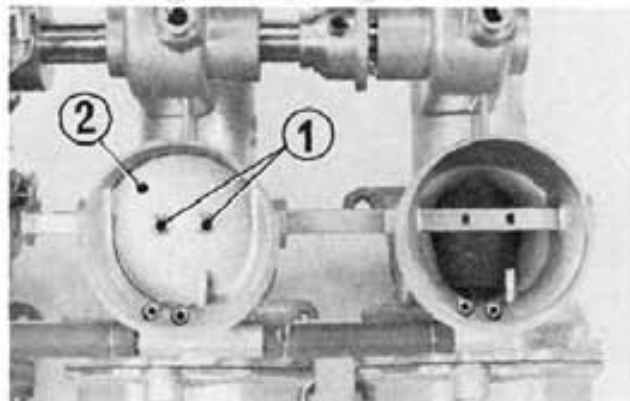


Fig. K7-7 ① Screws ② Choke valve ③ Tube

B. Disassembly

Carburetor, throttle valve and jet needle:

1. Remove the carburetor assembly from the engine.
2. Remove the rear stay from the carburetor assembly by loosening the four bolts.
3. Unhook the throttle return spring from the stopper arm. Remove the stay plate by loosening the eight screws. Remove the accelerator pump spring. Unhook the choke relief spring at the choke lever.
4. Remove the carburetor top by loosening the two screws.
5. Loosen the link arm fixing screw. Loosen the lock nut and remove the throttle lever set screw.
6. Remove the choke valve from the choke shaft by loosening the two screws. Remove the accelerator pump fuel tubes.
7. Separate the carburetors.