


FUSE BOX
MAIN 20A
SUB 20AX2
10AX4

STARTER RELAY SWITCH WIRE

MAIN WIRE HARNESS

BATTERY POSITIVE(+)CABLE

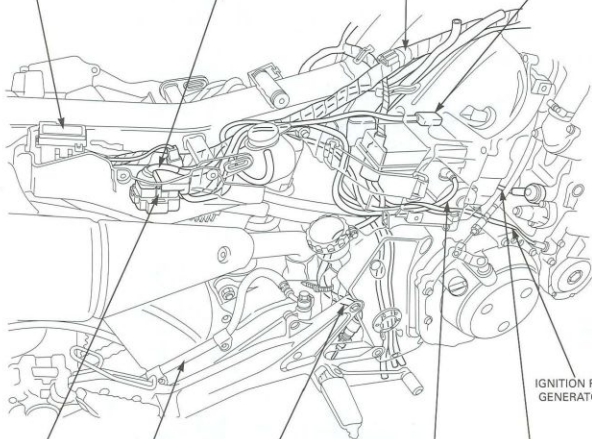

MAIN FUSE 30A

REAR BRAKE HOSE

REAR BRAKE LIGHT SWITCH WIRE

STARTER MOTOR WIRE

OIL PRESSURE SWITCH WIRE

IGNITION PULSE
GENERATOR WIRE