

2. FRAME/BODY PANELS/EXHAUST SYSTEM

BODY PANEL LOCATIONS	2-0	REAR COWL	2-3
SERVICE INFORMATION	2-1	FRONT FENDER	2-3
TROUBLESHOOTING	2-1	REAR FENDER A	2-4
SEAT	2-2	REAR FENDER B	2-4
SIDE COVER	2-2	MUFFLER/EXHAUST PIPE	2-5
AIR CLEANER HOUSING SIDE COVER	2-2		

SERVICE INFORMATION

GENERAL

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.
- This section covers removal and installation of the body panels and exhaust system.
- Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.
- Always replace the exhaust pipe gaskets after removing the exhaust pipe from the engine.

TORQUE VALUES

Exhaust pipe joint flange nut	20 N•m (2.0 kgf•m, 14 lbf•ft)
Exhaust pipe mounting bolt	27 N•m (2.8 kgf•m, 20 lbf•ft)
Exhaust pipe band bolt	27 N•m (2.8 kgf•m, 20 lbf•ft)
Muffler band flange bolt	27 N•m (2.8 kgf•m, 20 lbf•ft)
Muffler mounting bolt	27 N•m (2.8 kgf•m, 20 lbf•ft)

TROUBLESHOOTING

Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leak

Poor performance

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler