

## REAR FENDER A

### REMOVAL/INSTALLATION


Remove the rear cowl (page 2-3).

Remove the following:

- R./L. turn signal light 2P connector.
- License light 2P connector.

Remove the socket bolts/nuts and flange bolts.  
Remove the rear fender A.

Installation is in the reverse order of removal.

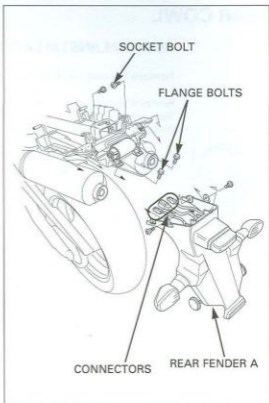

## REAR FENDER B

### REMOVAL/INSTALLATION

Remove the rear fender A (see upper).

Remove the following:

- Rear shock absorber reserve tank
- Starter relay switch
- Fuse box
- Fan control relay
- Fuel cut relay
- Engine stop relay
- Turn signal relay
- PGM-FI/IGN unit/Engine control module(ECM)

*Do not let the  
PGM-FI/IGN  
unit/Engine control  
module(ECM)  
hang free.*

Remove the socket bolts and flange bolts.  
Remove the rear fender B from the frame.

Installation is in the reverse order of removal.

