

Apply clean engine oil to the new oil filter O-ring.

Install the new oil filter and tighten it to the specified torque.

TOOL:
Oil filter wrench **07HAA-PJ70100**


TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)

Fill the crankcase with recommended engine oil.

OIL CAPACITY:
3.5 liter (3.7 US qt, 3.1 Imp qt) after draining
3.6 liter (3.8 US qt, 3.2 Imp qt) after draining/filter change

Install the oil filler cap.

Start the engine and let it idle for 2 to 3 minutes.
Stop the engine and recheck the oil level.
Make sure there are no oil leaks.

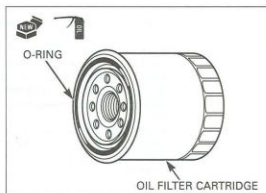


ENGINE IDLE SPEED

Open and support the front end of fuel tank (page 3-4).

- Inspect and adjust the idle speed after all other engine maintenance items have been performed and are within specifications.
- The engine must be warm for accurate idle speed inspection and adjustment.

Warm up the engine for about ten minutes.
Turn the throttle stop screw as required to obtain the specified idle speed.

IDLE SPEED: 1,200 ± 100 min⁻¹ (rpm)

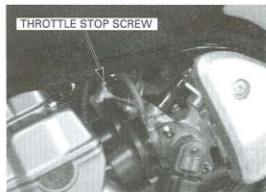

RADIATOR COOLANT

Check the coolant level of the reserve tank with the engine running at normal operating temperature. The level should be between the "UPPER" and "LOWER" level lines.

