

5. FUEL SYSTEM (Programmed Fuel Injection)

SERVICE INFORMATION	5-1	PRESSURE REGULATOR	5-63
TROUBLESHOOTING	5-3	STARTER VALVE CABLE/ THROTTLE STOP CONTROL KNOB	5-64
SYSTEM LOCATION	5-4	STARTER VALVE	5-65
SYSTEM DIAGRAM	5-5	STARTER VALVE SYNCHRONIZATION	5-68
PGM-FI (PROGRAMMED FUEL INJECTION) SYSTEM	5-6	MAP SENSOR	5-70
PGM-FI SELF-DIAGNOSIS MALFUNC- TION INDICATOR LAMP (MIL)		IAT SENSOR	5-71
FAILURE CODES	5-10	ECT SENSOR	5-71
FUEL LINE INSPECTION	5-44	CAM PULSE GENERATOR	5-72
FUEL PUMP	5-47	TP SENSOR	5-73
FUEL CUT RELAY	5-48	BANK ANGLE SENSOR	5-74
FUEL TANK	5-49	ENGINE STOP RELAY	5-75
AIR CLEANER HOUSING	5-53	ECM (ENGINE CONTROL MODULE)	5-76
THROTTLE BODY	5-58	PAIR SOLENOID VALVE	5-77
INJECTOR	5-62		

SERVICE INFORMATION

GENERAL

- Be sure to relieve the fuel pressure while the engine is OFF.
- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.