

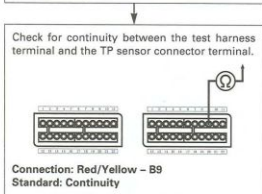
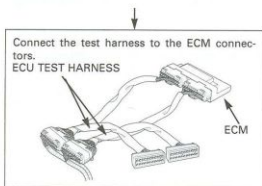


FUEL SYSTEM (Programmed Fuel Injection)

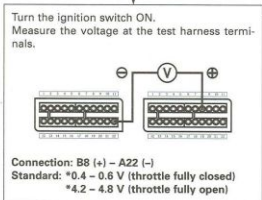

No continuity → • Open circuit in Red/Yellow wire

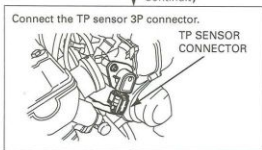

Normal → • Replace the ECM with a new one, and inspect it again

Out of range → • Faulty TP sensor