


FUEL SYSTEM (Programmed Fuel Injection)

Remove the following:

- fuel tank over flow hose
- fuel tank air vent hose
- fuel pump/reserve sensor 3P connector

Clamp the the fuel return hose.

Disconnect the fuel return hose at the pressure regulator.

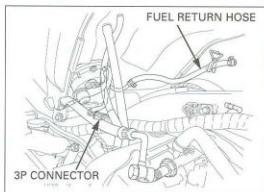


Remove the bolt and maintenance wire.



Close the fuel tank.

Remove the fuel tank mounting bolt/nut and fuel tank.

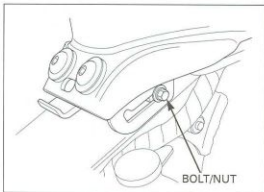

Place the fuel tank upside down.

NOTICE

Do not damage the fuel tank.

Disconnect the fuel return tube from the fuel pump. Remove the fuel hose banjo bolt and sealing washers, then remove the fuel hose from the fuel pump.

Refer to page 5-47 for fuel pump removal.

