


Connect the fuel injector 8P connector.  
Connect the No.4 fuel injector 2P connector.

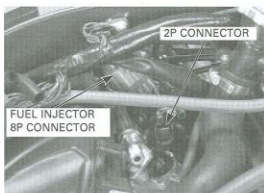

Connect the crankcase breather tube to the air cleaner housing.



Install the vacuum tubes to the intake air duct control solenoid valve.

Connect the intake air duct control solenoid valve 2P connector.  
Connect the cam pulse generator 2P connector.

Install the following:  
- air cleaner element (page 3-5)  
- fuel tank (page 5-51)

Connect the throttle cables to the throttle pipe (page 13-9).

