

## FUEL SYSTEM (Programmed Fuel Injection)

### STARTER VALVE ARM



Install the starter valve arms onto the starter valves. Install and tighten the starter valve arm mounting screws to the specified torque.

**TORQUE: 1 N·m (0.09 kgf·m, 0.7 lbf·ft)**

Install the starter valve cable/throttle stop control nob (page 5-64).

Turn the starter valve screw until it seats lightly, then back it out as noted during removal.

Install the throttle body (page 5-66).

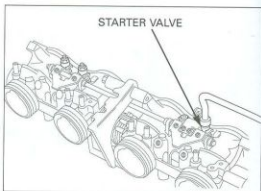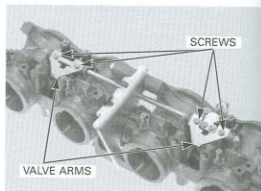

## STARTER VALVE SYNCHRONIZATION

### NOTE:

- Synchronize the starter valve with the engine at the normal operating temperature and with the transmission in neutral.
- Use a tachometer with graduations of 50 rpm or smaller that will accurately indicate 50 rpm change.

Open and support the front end of fuel tank (page 3-15).

Remove the No.1 and No.4 vacuum tubes from the throttle body.

Connect the tubes to the vacuum gauge.

Connect the tachometer.

