

IAT SENSOR

REMOVAL/INSTALLATION


Open and support the front end of the fuel tank (page 3-4).

Disconnect the IAT sensor connector.

Remove the screws and IAT sensor from the air cleaner housing cover.

Check the O-ring for damage and replace if necessary.

Installation is in the reverse order of removal.

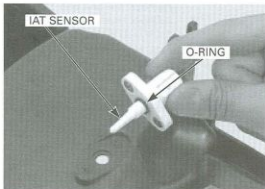

ECT SENSOR


REMOVAL/INSTALLATION

Drain the coolant from the system (page 6-5).

Remove the thermostat (page 6-6).

Replace the ECT sensor while the engine is cold.

Disconnect the ECT sensor connector from the sensor.

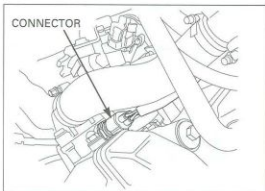

Remove the ECT sensor and sealing washer. Install the new sealing washer and ECT sensor. Tighten the ECT sensor to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Connect the ECT sensor connector.

Fill the cooling system with recommended coolant (page 6-5).

Always replace a sealing washer with a new one.

