

 
## CAM PULSE GENERATOR

### REMOVAL/INSTALLATION

Open and support the front end of fuel tank (page 3-4).


Disconnect the cam pulse generator 2P connector.

2P CONNECTOR



Remove the bolt and cam pulse generator from the cylinder head.


CAM PULSE GENERATOR

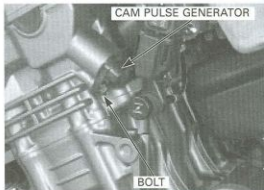

Install the new O-ring onto the cam pulse generator.  
Install the cam pulse generator into the cylinder head.

Install and tighten the mounting bolt securely.

CAM PULSE GENERATOR

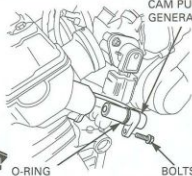

Route the cam pulse generator wire properly, connect the 2P connector.

Install the removed parts in the reverse order of removal.

2P CONNECTOR

